FAX-EB15
FAX-EB10
PARTS CATALOG

REVISION 0

FAX-EB15	H12-2063	230V	EC
FAX-EB15	H12-2073	230V	EC
FAX-EB10	H12-2083	230V	EC
FAX-EB10	H12-2093	230V	EC
TELEPHONE 7	H12-3784	230V	UK
TELEPHONE 7	H12-3786	230V	HUN/POL
TELEPHONE 7	H12-3787	230V	CZO/LAT
TELEPHONE 7	H12-3796	230V	SLO
TELEPHONE 7	H12-3797	230V	S.A.

Canon

APR. 2001 **HY8-30AN-000**

COPYRIGHT © 2001 CANON INC.

CANON FAX-EB15/EB10 APR. 2001 PRINTED IN JAPAN (IMPRIME AU JAPON)

Application

This manual has been issued by Canon Inc. for qualified persons to learn technical theory, installation, maintenance, and repair of products. This manual covers all localities where the products are sold. For this reason, there may be information in this manual that does not apply to your locality.

Corrections

This manual may contain technical inaccuracies or typographical errors due to improvements or changes in products. When changes occur in applicable products or in the content of this manual, Canon will release technical information as the need arises. In the event of major changes in the contents of this manual over a long or short period, Canon will issue a new editions of this manual.

The following paragraph does not apply to any countries where such provisions are inconsistent with local law.

Trademarks

The product names and company names described in this manual are the registered trademarks of the individual companies.

Copyright

This manual is copyrighted with all rights reserved. Under the copyright laws, this manual may not be copied, reproduced or translated into another language, in whole or in part, without the written consent of Canon Inc.

Copyright © 2001 by Canon Inc.

CANON INC.
Consumer Imaging Products Quality Assurance Dept. 1
5-1 Hakusan 7-Chome, Toride-city, Ibaraki 302-8501, Japan

DTP System

The data contained on this manual were created using Windows 95 computers.
Document creation and page layout were performed using Adobe® PageMaker® 6.5.
Logos and illustrations were created using Adobe® Illustrator® 9.0J.

I. CONTENTS

1. ILLUSTRATION INDEX
2. PARTS LAYOUT & PARTS LIST
3. TOOL
4. LUBRICATIONS
5. NUMERICAL INDEX

II. ABOUT THIS MANUAL

1. ILLUSTRATION INDEX

For illustration index, the parts layout illustrations in this parts catalog are listed in abbreviated form in order of illustration number to identify the pages they appear on. To find an illustration of a part, see the ILLUSTRATION INDEX.

2. PARTS LAYOUT & PARTS LIST

Parts layout illustration

a) Parts search

Find a part from the parts layout illustration and find its key number from the parts list to identify the part number and name.
Further, screws, nuts, washers, grip rings, pins and spacers are mentioned in the parts list.

Note: If parts have the same or similar shape but different specifications, their key number is assigned to several part numbers and names in the parts list.

b) Parts replacement procedure

The parts layout illustrations are arranged according to the disassembly procedure of the product.
When a unit in the illustration can be disassemble further, a reference illustration page of the disassembly will be included.
Parts where grease is to be applied are displayed as "Lubrication". When replacing parts, or if grease has accidentally been wiped off, refer to "4". (Lubrications), and reapply the grease.
The letters (A , B etc.) in the illustration indicate the connection locations of cables and screws.

Parts list

a) FIGURE & KEY No.

The FIGURE & KEY No. column corresponds to the key numbers assigned to the parts in the parts layout illustration.
It also corresponds to the part locations printed on the PC board.

b) PART NUMBER

The PART NUMBER column gives the part numbers corresponding to the key numbers. To order a part, indicate the part number clearly.
Note: Parts marked NPN are not service parts.

c) RANK

The service parts with N in the RANK column are order parts.

d) QTY

The QTY column gives the number of parts in the corresponding components layout illustration.

e) DESCRIPTION

The DESCRIPTION column gives the part names in English.
To order a part, indicate the part name, too.

3. TOOL

This is a list of tools used for servicing products.

4. LUBRICATIONS

Where grease is to be applied in order to allow moving parts to work smoothly, and to increase conductivity, the type and amount of grease to be used will be mentioned.

5. NUMERICAL INDEX

All the parts listed in this parts catalog are arranged in order of part number. You can identify part locations and names from the NUMERICAL INDEX.

1. ILLUSTRATION INDEX

FIGURE 1 PACKAGE CONTENTS	See Page 2-1	**FIGURE 2** TRAY	See Page 2-3
FIGURE 3 EXTERNAL COVERS	See Page 2-5	**FIGURE 4** SCANNER & OPERATION PANEL	See Page 2-7

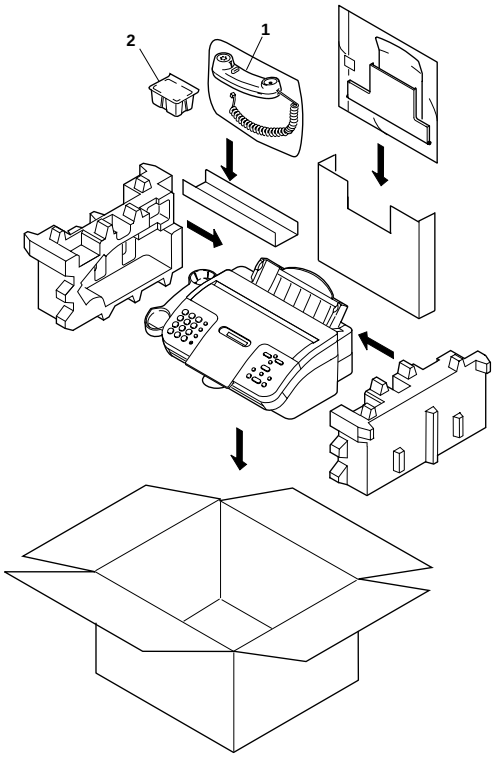

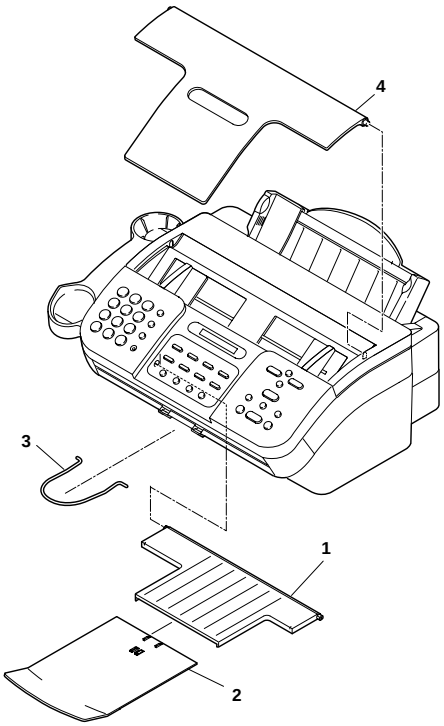

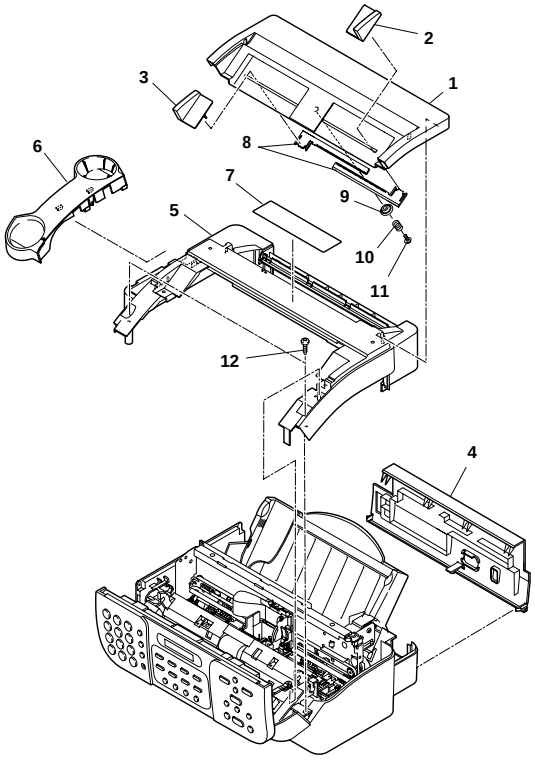

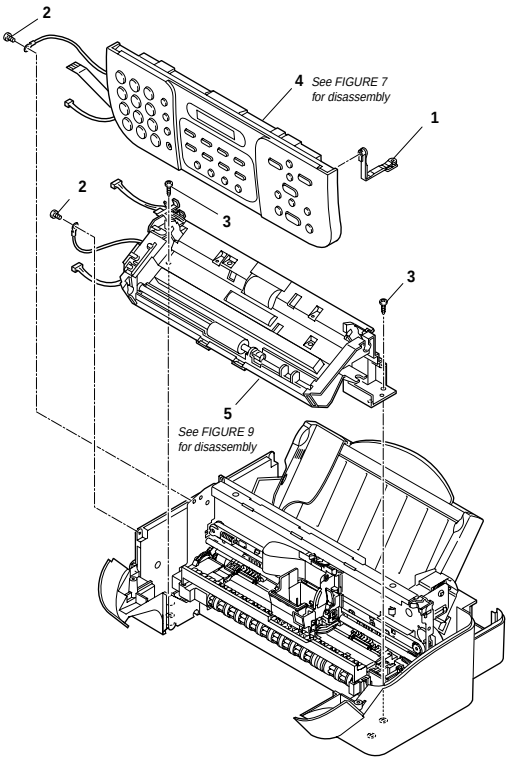

FIGURE 5 PRINT ASS'Y	See Page 2-9

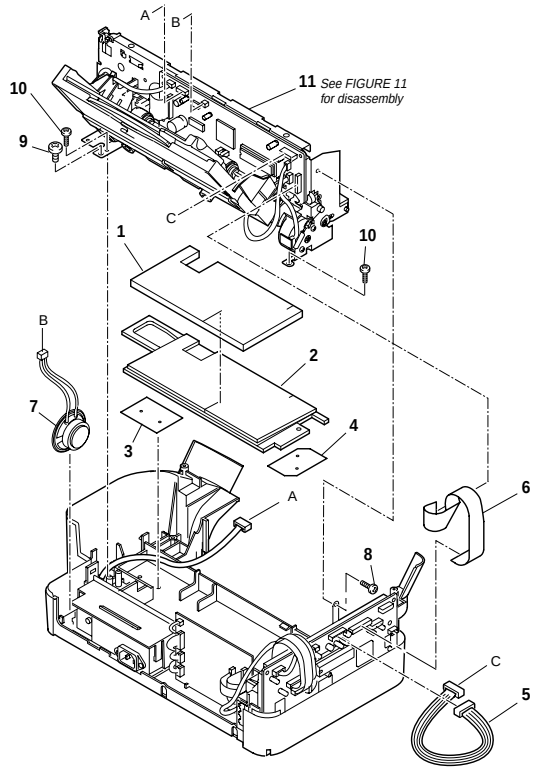

FIGURE 6 CIRCUIT BOARDS & POWER SUPPLY	See Page 2-11

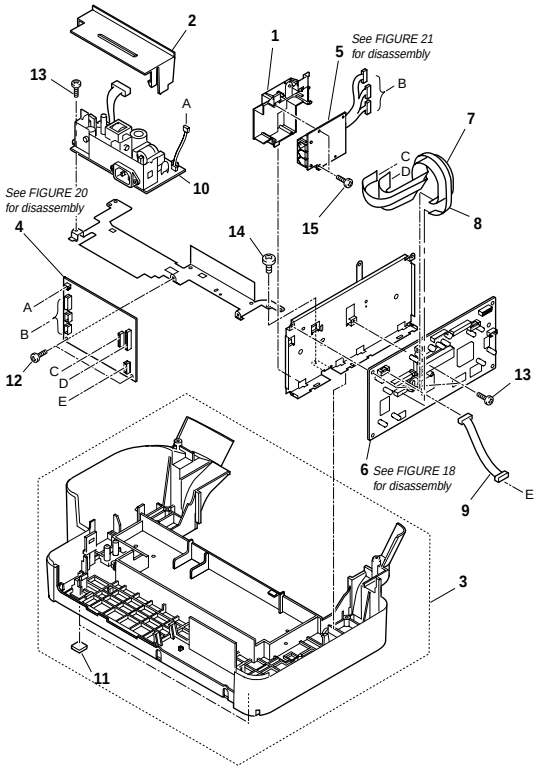

FIGURE 7 OPERATION PANEL & ADF UPPER	See Page 2-13

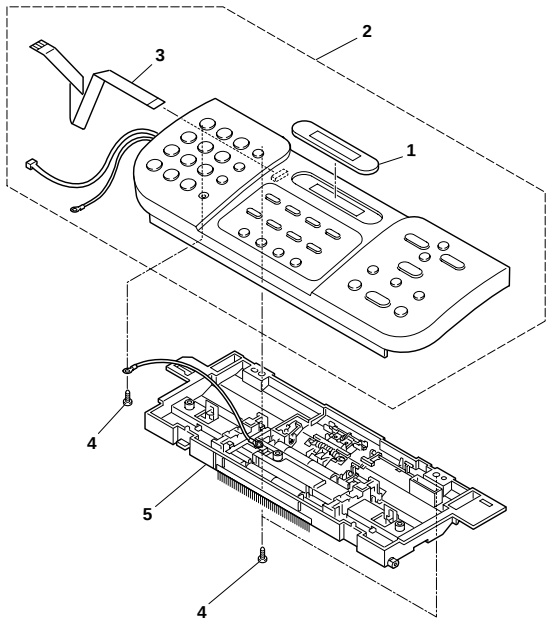

FIGURE 8 ADF UPPER	See Page 2-15

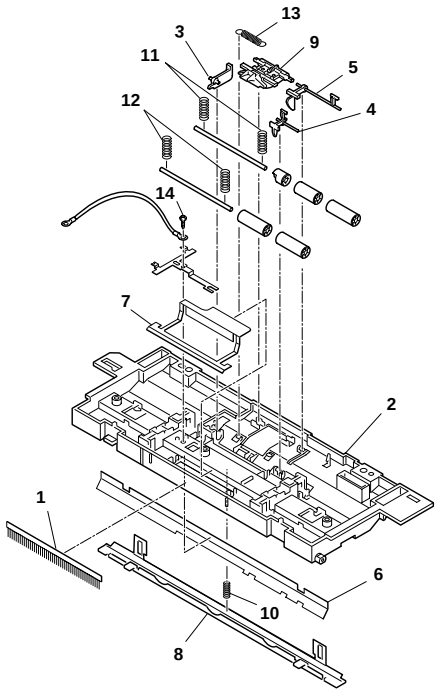

FIGURE 9 ADF LOWER (1)	See Page 2-17	**FIGURE 10** ADF LOWER (2)	See Page 2-19

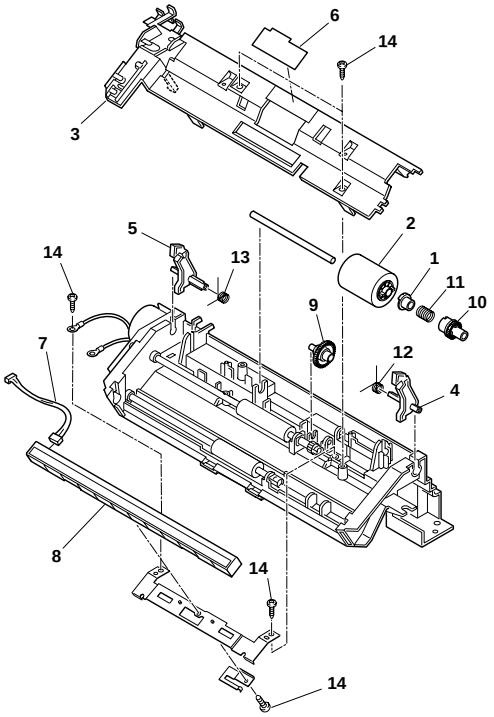

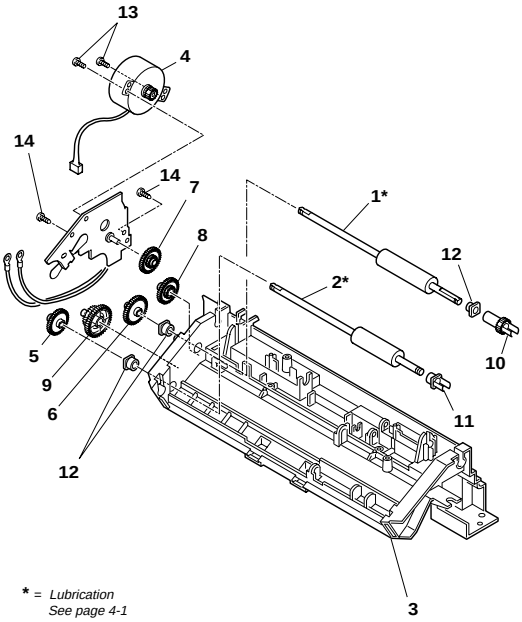

FIGURE 11 AUTO SHEET FEEDER & PCNT BOARD	See Page 2-21	**FIGURE 12** CARRIAGE SECTION	See Page 2-23

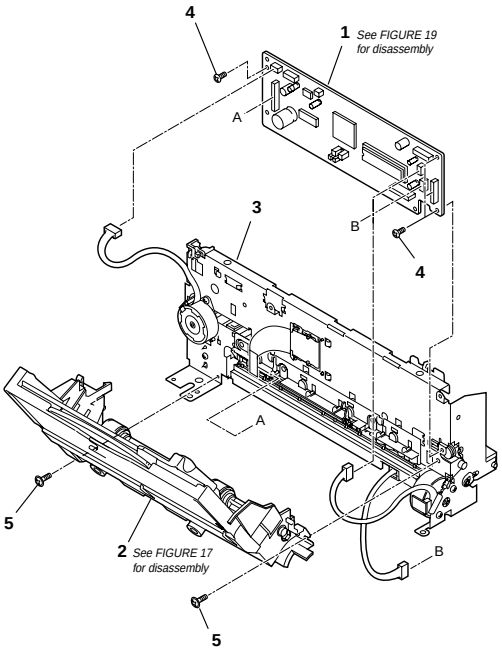

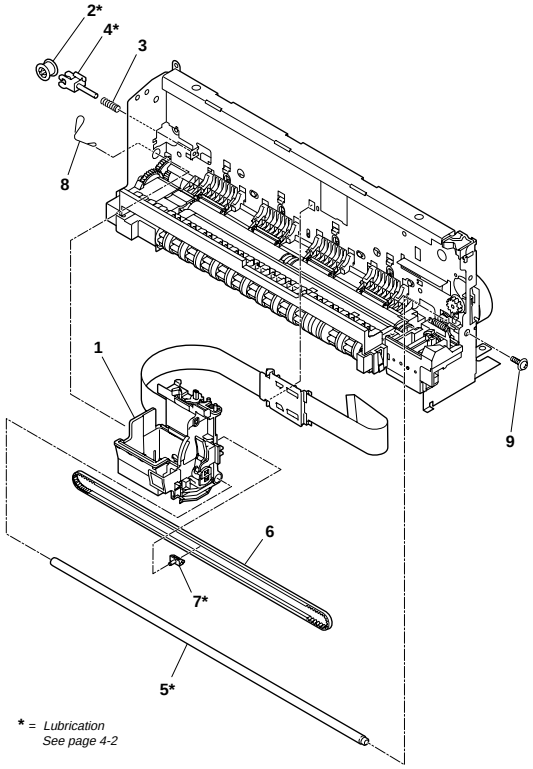

FIGURE 13 MOTORS

See Page 2-25

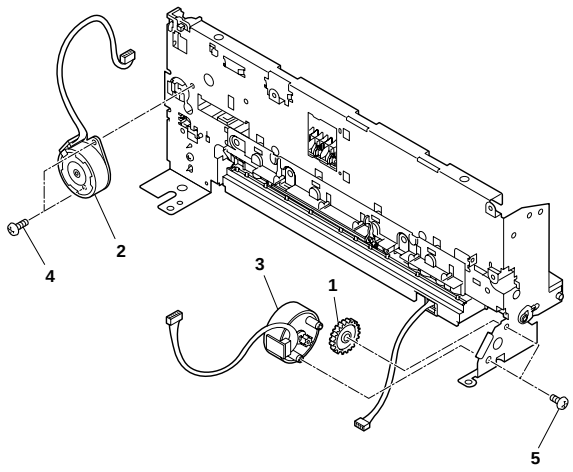

FIGURE 14 PAPER FEED SECTION

See Page 2-27

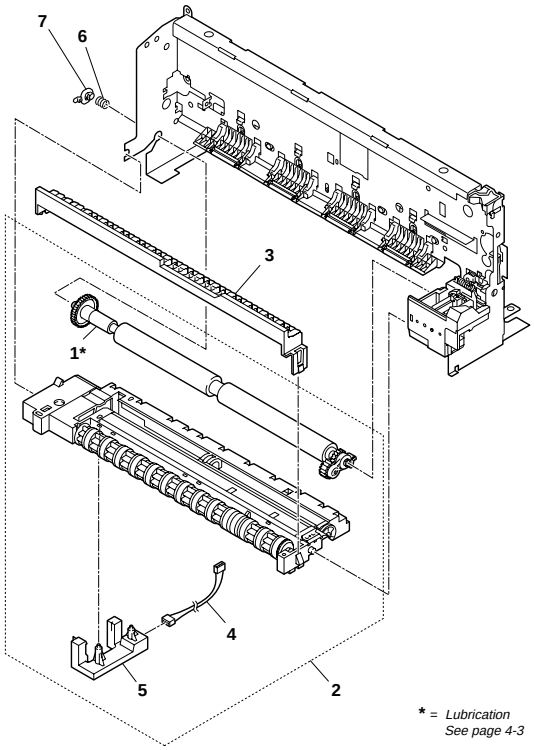

FIGURE 15 PURGE UNIT

See Page 2-29

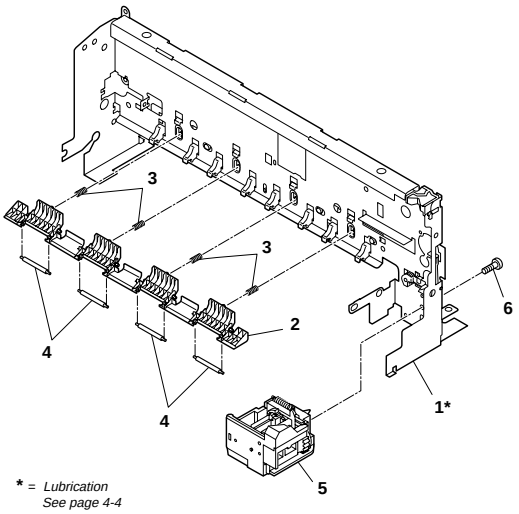

FIGURE 16 PRINT FRAME

See Page 2-31

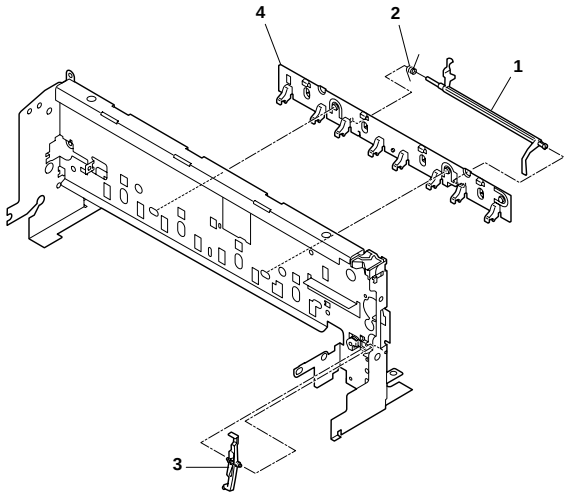

FIGURE 17 AUTO SHEET FEEDER	See Page 2-33

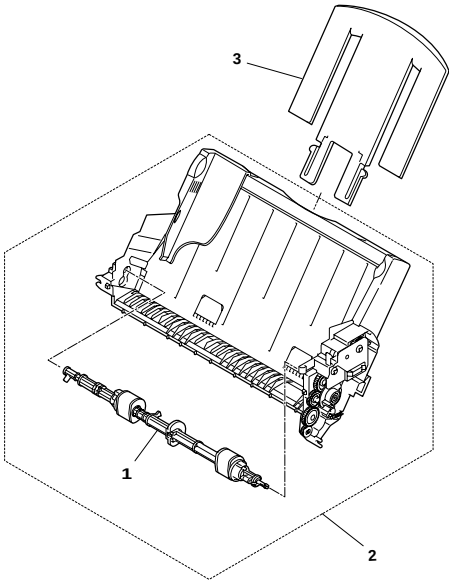

FIGURE 18 SCNT BOARD	See Page 2-35

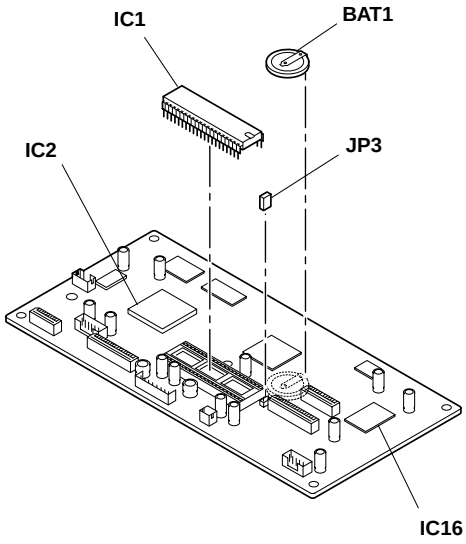

FIGURE 19 PCNT BOARD	See Page 2-37

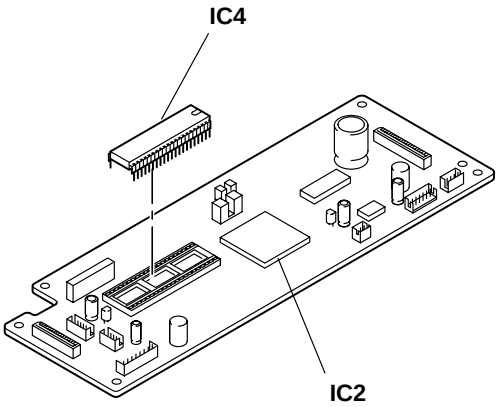

FIGURE 20 NCU BOARD	See Page 2-39

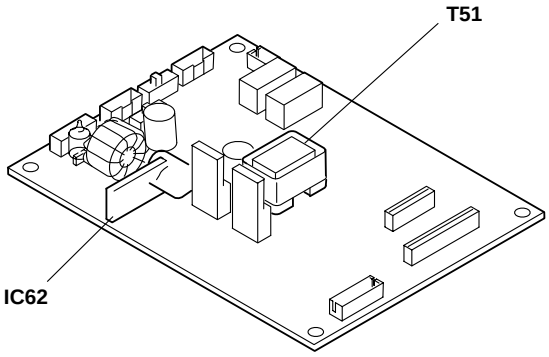

FIGURE 21 MODULAR JACK BOARD	See Page 2-41	**FIGURE 22** TELEPHONE 7	See Page 2-43
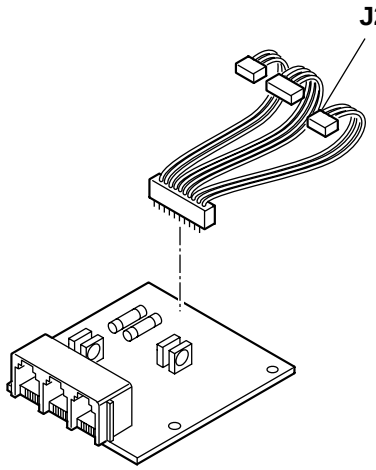		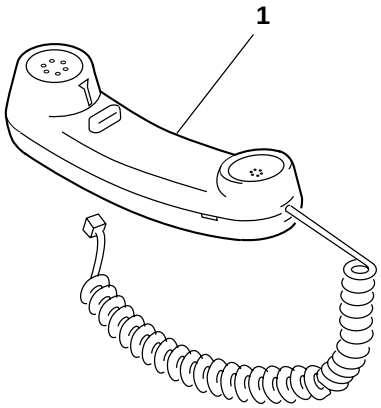	
FIGURE 23 TOOLS	See Page 3-1		
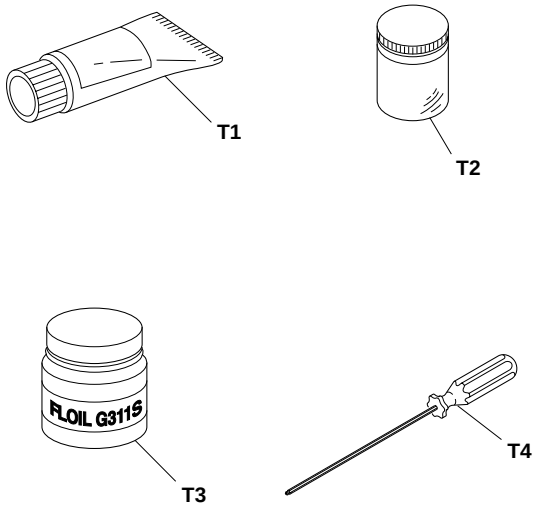			

2. PARTS LAYOUT & PARTS LIST

FIGURE 1 PACKAGE CONTENTS

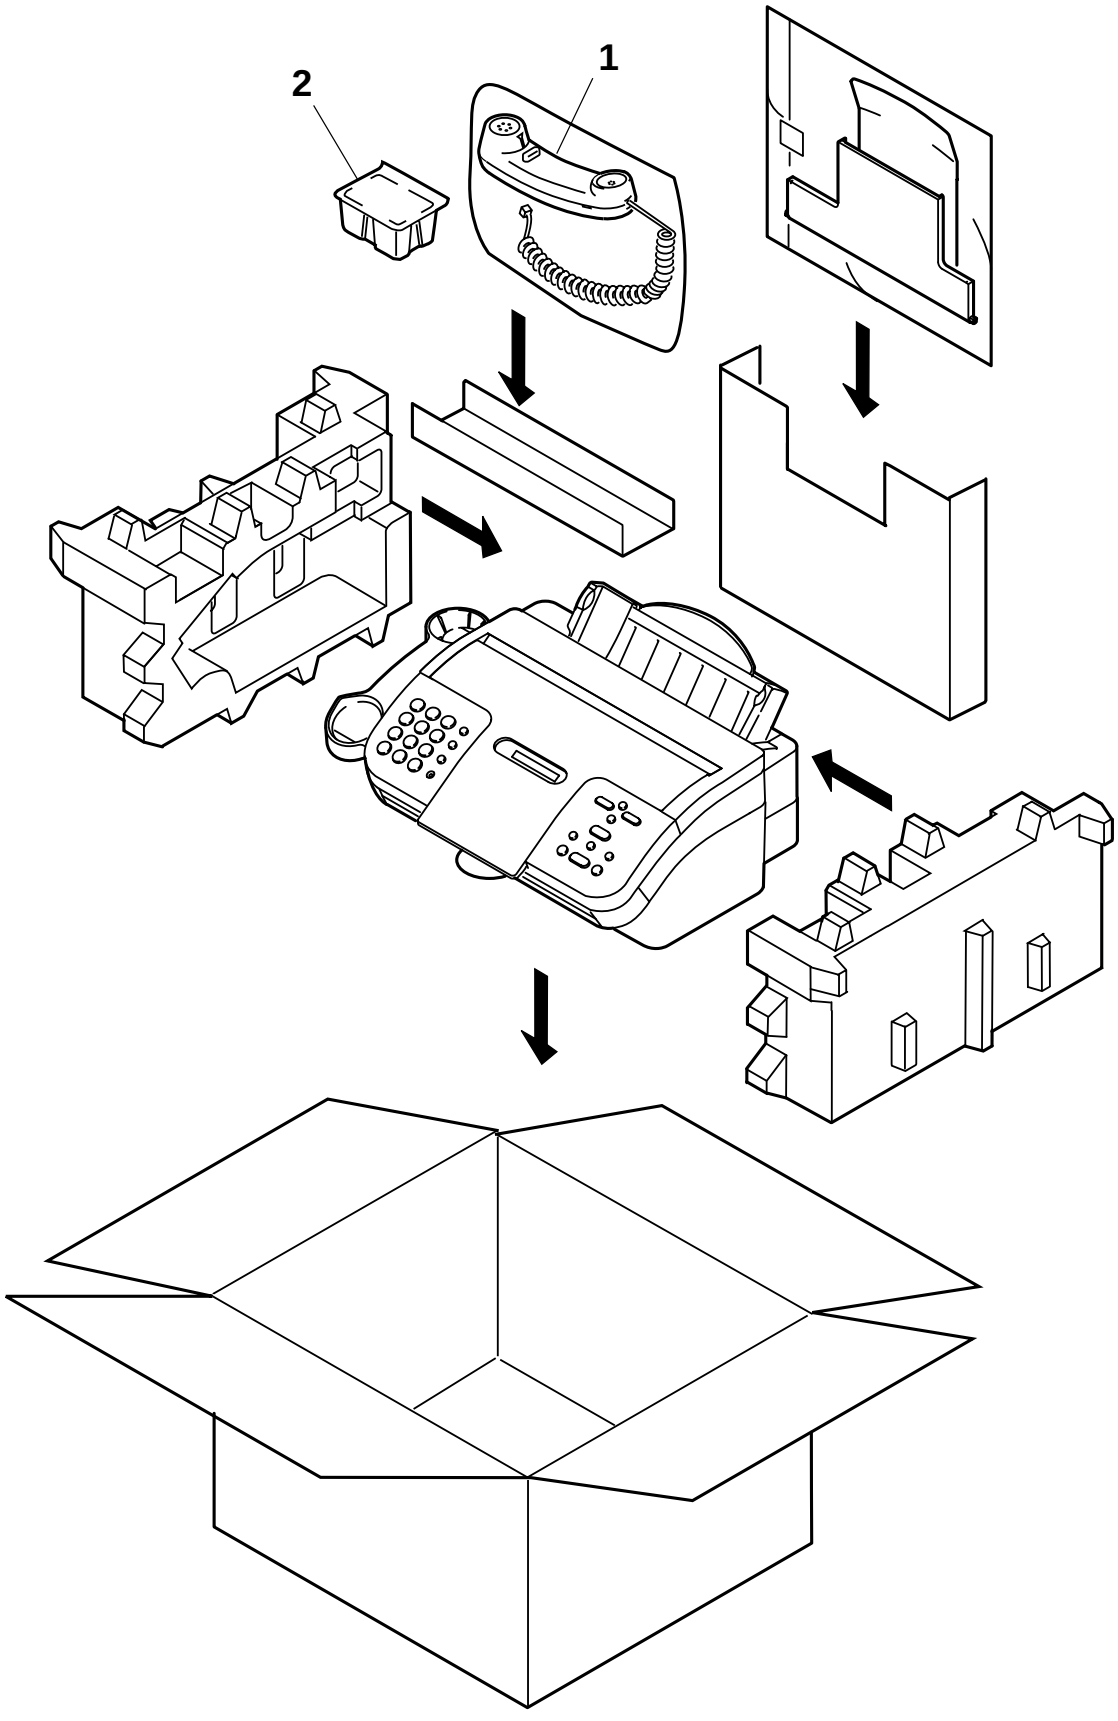

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
1 - 1	HH7-2530-000		1	HANDSET UNIT	FAX-EB15/EB10(H12-2063/2083)
2	NPN		1	BX-20 BLACK BJ CARTRIDGE	

FIGURE 2 TRAY

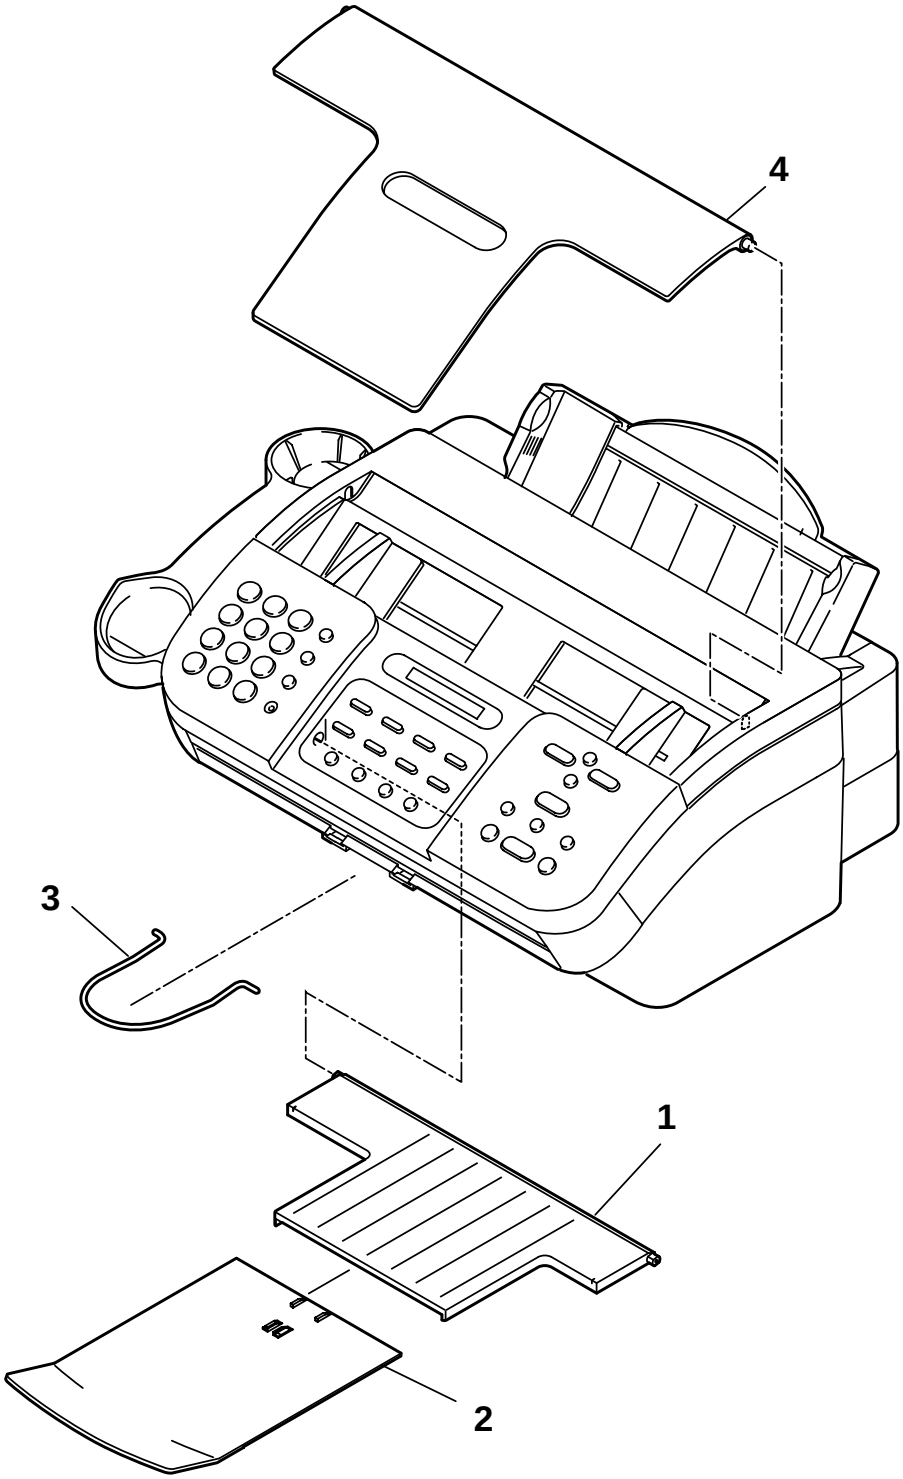

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
2 - 1	HB1-4877-000		1	TRAY, PAPER EXIT	
2	HB1-4878-000		1	TRAY, PAPER EXTENSION	
3	HB1-4881-000		1	TRAY, DOCUMENT EXIT	
4	HB1-4894-000		1	TRAY, DOCUMENT	FAX-EB15
	HB1-4954-000		1	TRAY, DOCUMENT	FAX-EB10

FIGURE 3 EXTERNAL COVERS

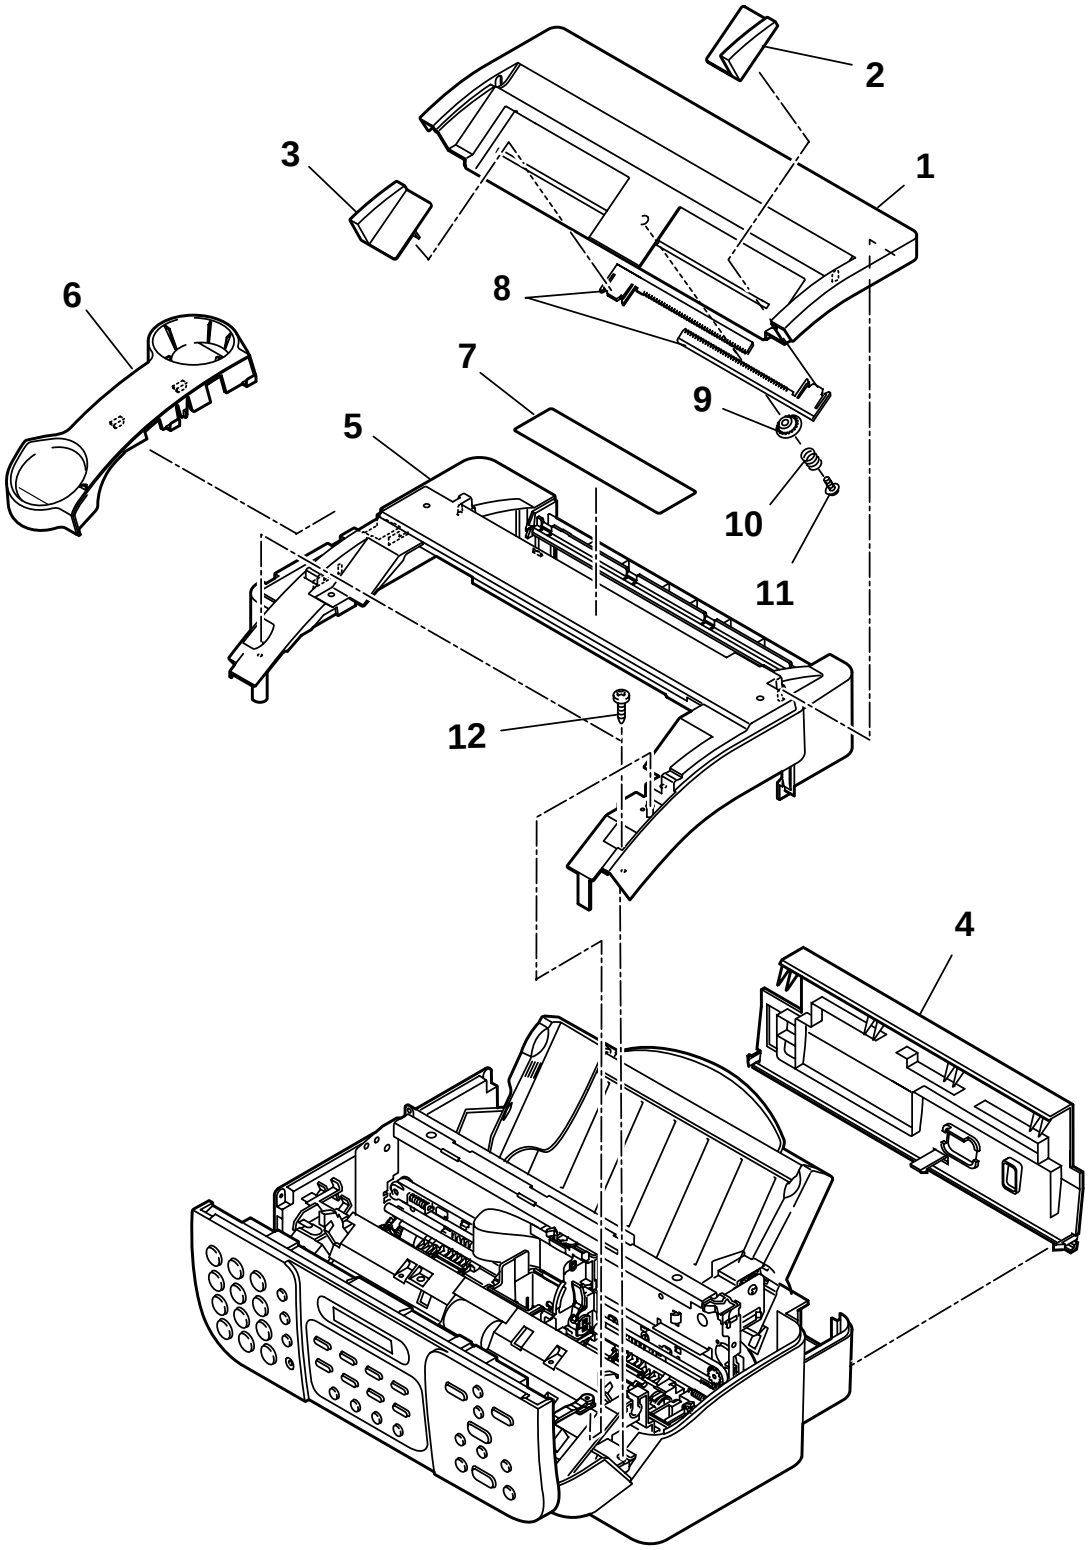

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
3 - 1	HB1-4873-000		1	COVER, PRINTER	
2	HB1-4874-000		1	GUIDE, DOCUMENT, RIGHT	
3	HB1-4875-000		1	GUIDE, DOCUMENT, LEFT	
4	HB1-4882-000		1	COVER, REAR	
5	HB1-4891-000		1	COVER, UPPER	
6	HB1-4892-000		1	HOLDER, HANDSET REST	
7	HB1-4897-000		1	LABEL, CARTRIDGE SET	
8	HB1-4953-000		2	RACK	
9	HS5-0172-000		1	PINION, 18T	
10	HS5-2094-000		1	SPRING	
11	XA9-0283-000		1	SCREW, TP, PH3X6	
12	XB4-7300-809		2	SCREW, TAP, BINDING HEAD, M3X8	

FIGURE 4 SCANNER & OPERATION PANEL

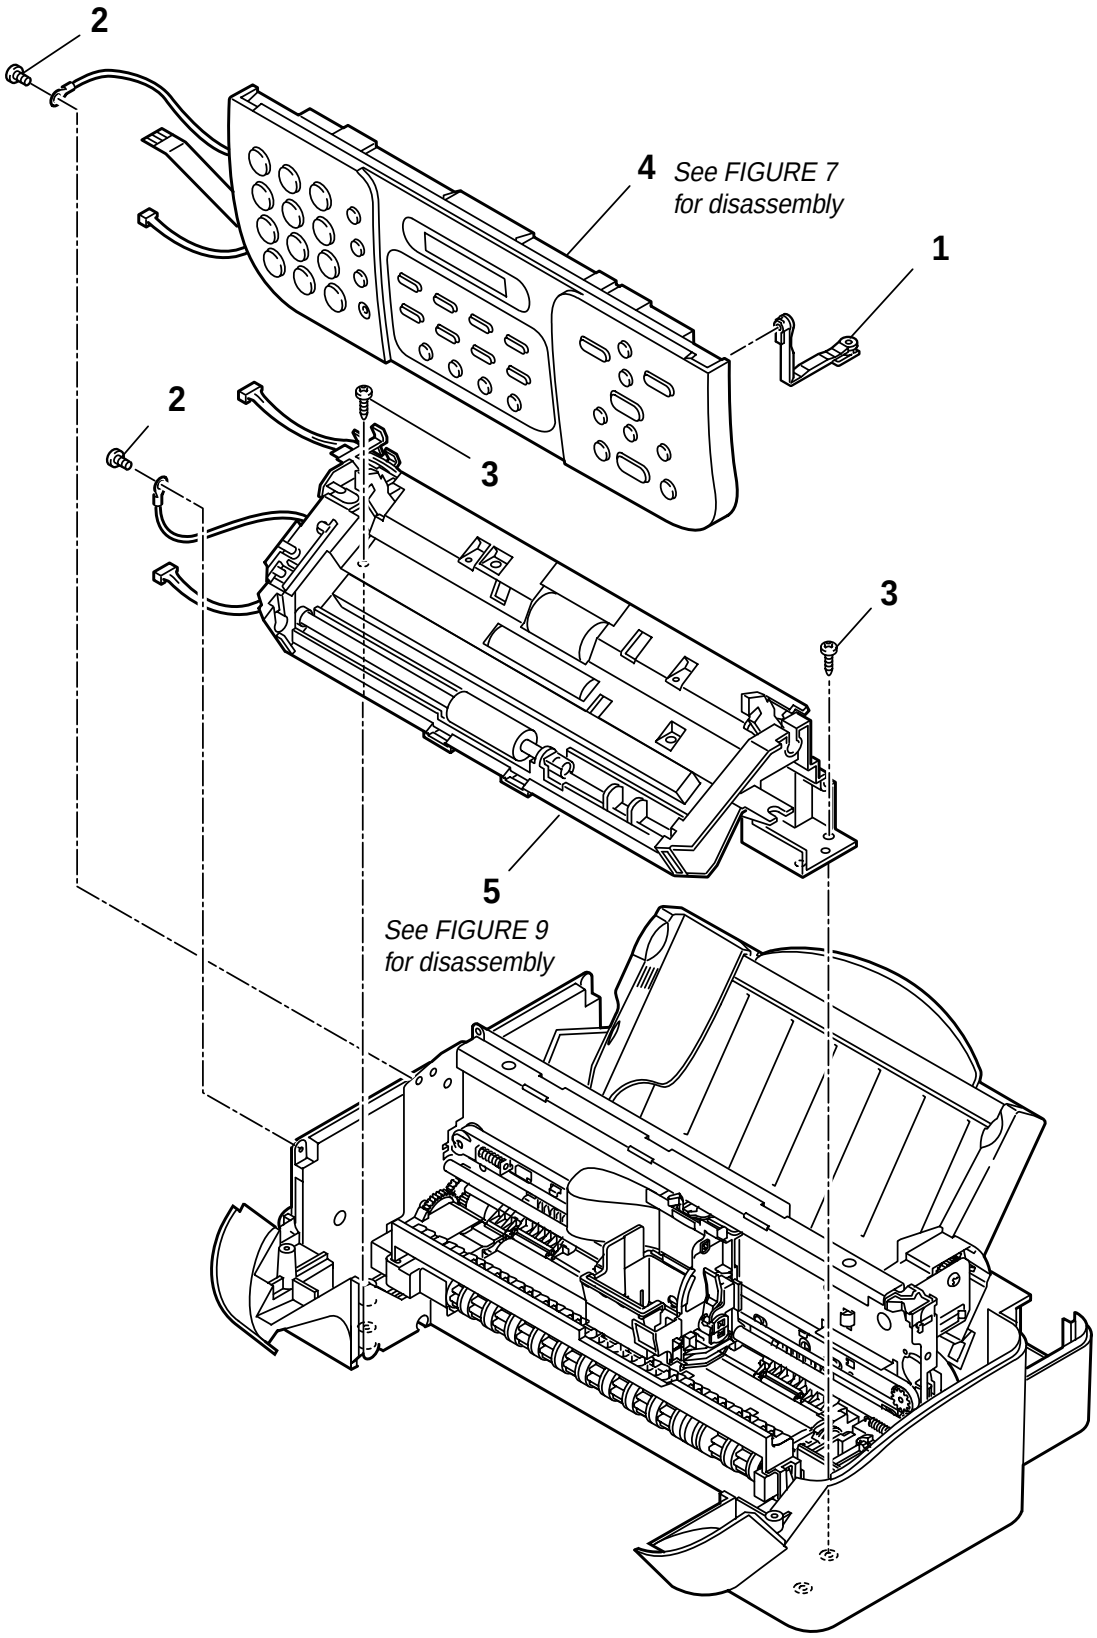

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
4 - 1	HB1-2867-000		1	STOPPER, OPERATION PANEL	
2	XB2-7300-607		2	SCREW, M3X6	
3	XB4-7300-809		2	SCREW, TAP, BINDING HEAD, M3X8	
4	NPN		1	OPERATION PANEL & ADF UPPER	
5	NPN		1	ADF LOWER ASS'Y	

FIGURE 5 PRINT ASS'Y

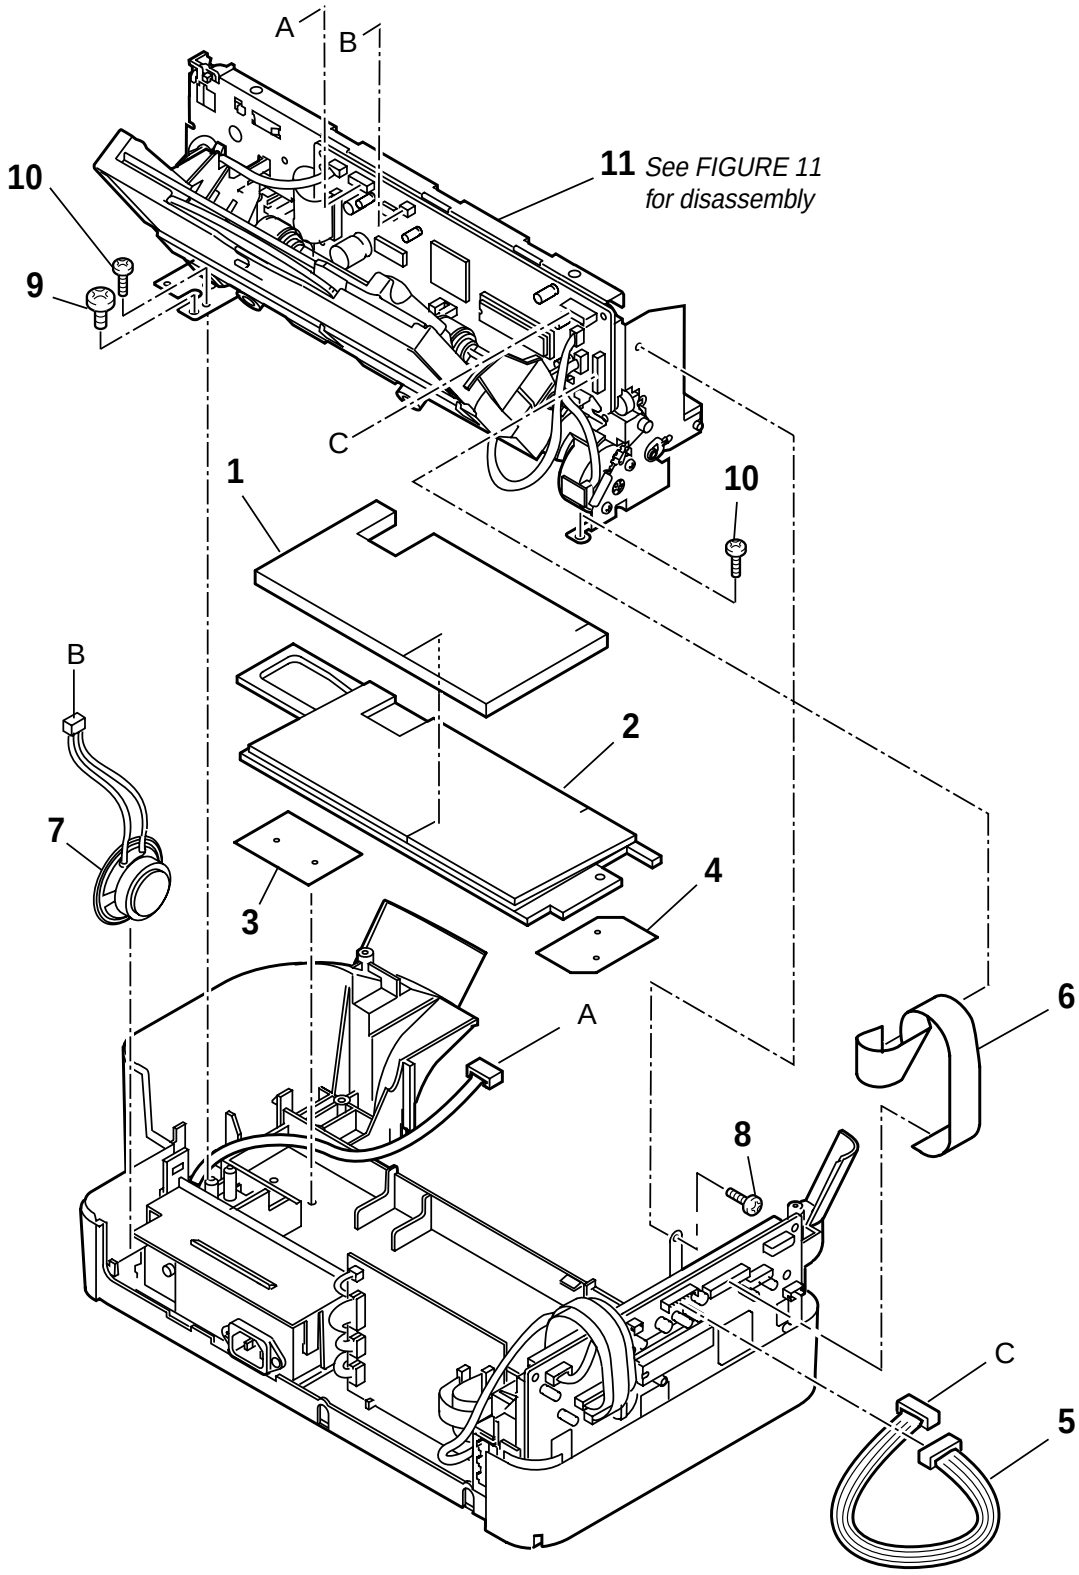

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
5 - 1	HB1-4886-000		1	ABSORBER, WASTE INK	
2	HB1-4887-000		1	ABSORBER, WASTE INK	
3	HB1-4888-000		1	ABSORBER, WASTE INK	
4	HB1-4966-000		1	ABSORBER, WASTE INK	
5	HH2-3063-000		1	CABLE WITH CONNECTOR, 8P	
6	HH2-3064-000		1	CABLE, FLAT, 25P	
7	HH7-2373-000		1	SPEAKER UNIT	
8	XB2-7300-607		1	SCREW, M3X6	
9	XB2-7400-607		1	SCREW, TOOTHED WASHER, M4X6	
10	XB4-7300-809		2	SCREW, TAP, BINDING HEAD, M3X8	
11	NPN		1	PRINT & ASF ASS'Y	

FIGURE 6 CIRCUIT BOARDS & POWER SUPPLY

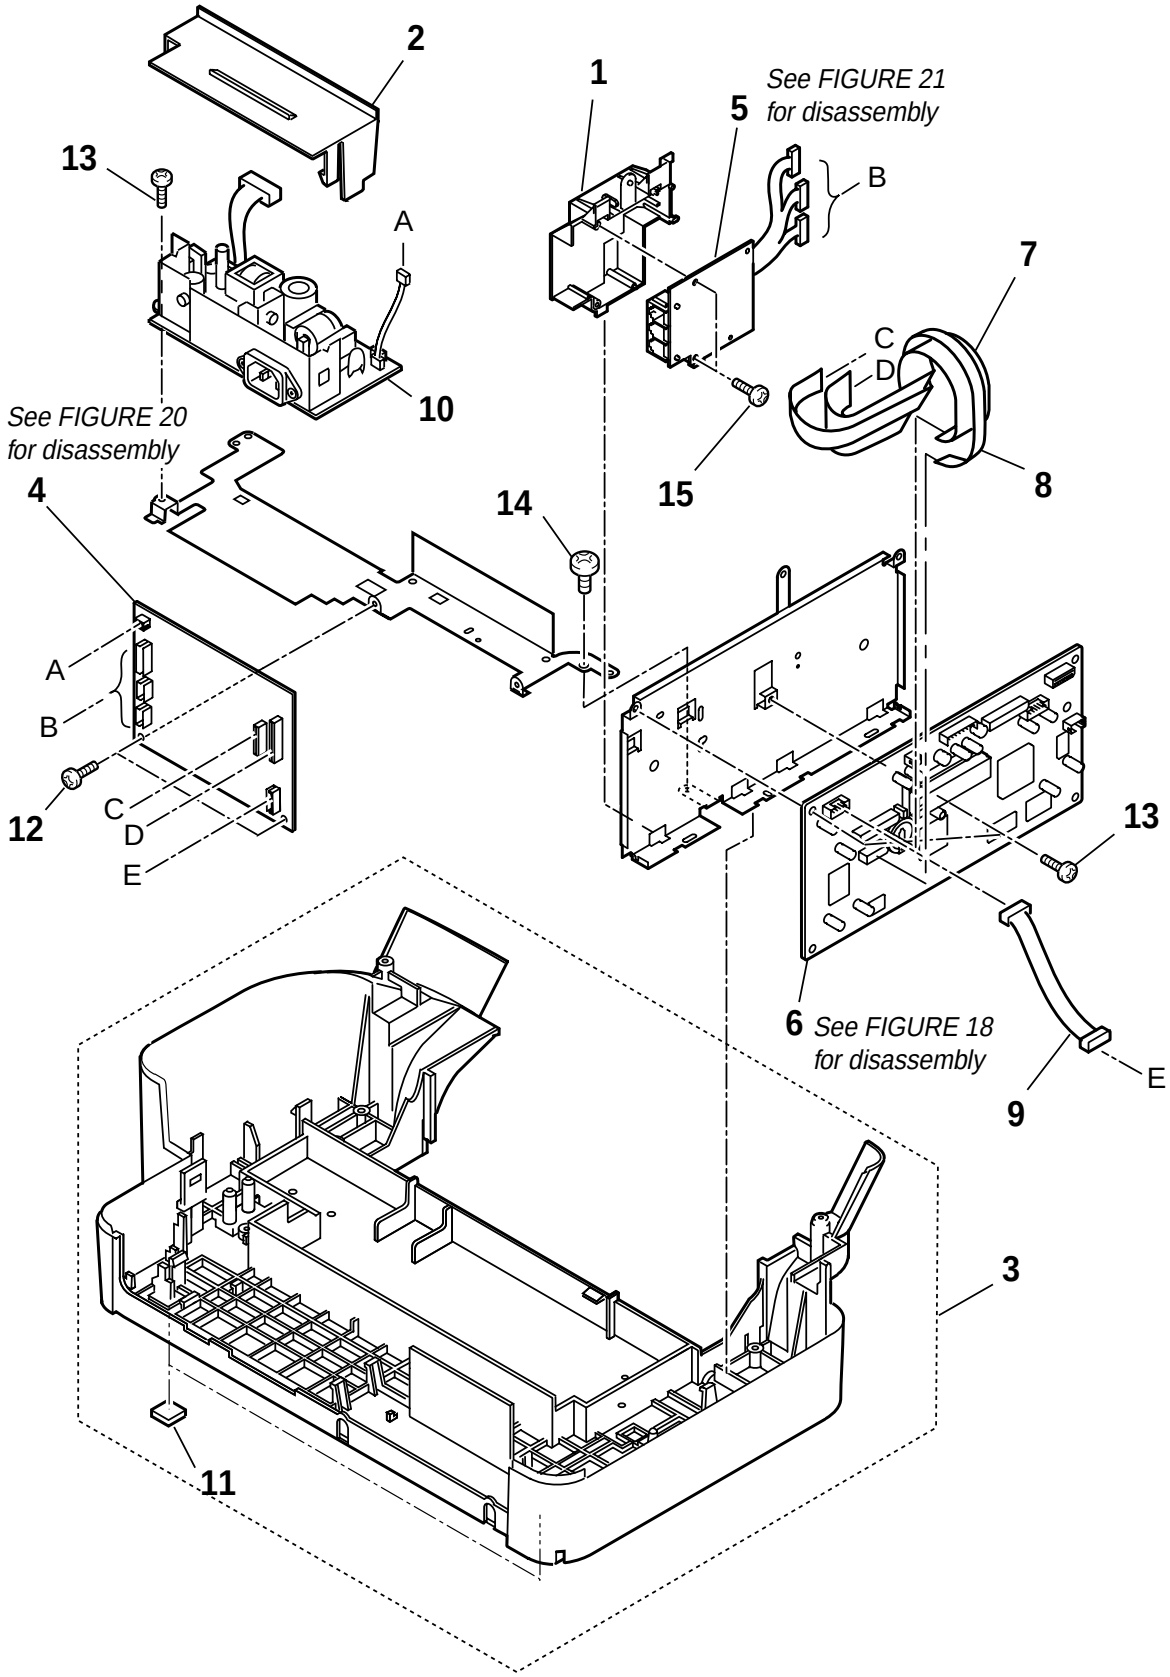

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
6 - 1	HB1-4884-000	N	1	COVER, MODULAR BOARD	
2	HB1-4885-000	N	1	COVER, POWER SUPPLY	
3	HF5-0625-000	N	1	MAIN FRAME ASS'Y	
4	HG5-2587-000		1	NCU BOARD ASS'Y	
5	HG5-2603-000		1	MODULAR JACK BOARD ASS'Y	
6	HG5-2604-000		1	SCNT BOARD ASS'Y	FAX-EB15
	HG5-2622-000		1	SCNT BOARD ASS'Y	FAX-EB10
7	HH2-3116-000		1	CABLE, FLAT, 23P	
8	HH2-3118-000		1	CABLE, FLAT, 14P	
9	HH2-3065-000		1	CABLE WITH CONNECTOR, 6P	
10	HH3-5367-000		1	POWER SUPPLY UNIT	
11	QB1-3593-000		2	FOOT, PRINTER	
12	XB1-2300-407		2	SCREW, BH3X4 (S)	
13	XB2-7300-607		3	SCREW, M3X6	
14	XB2-7400-607		1	SCREW, TOOTHED WASHER, M4X6	
15	XB4-7300-809		2	SCREW, TAP, BINDING HEAD, M3X8	

FIGURE 7 OPERATION PANEL & ADF UPPER

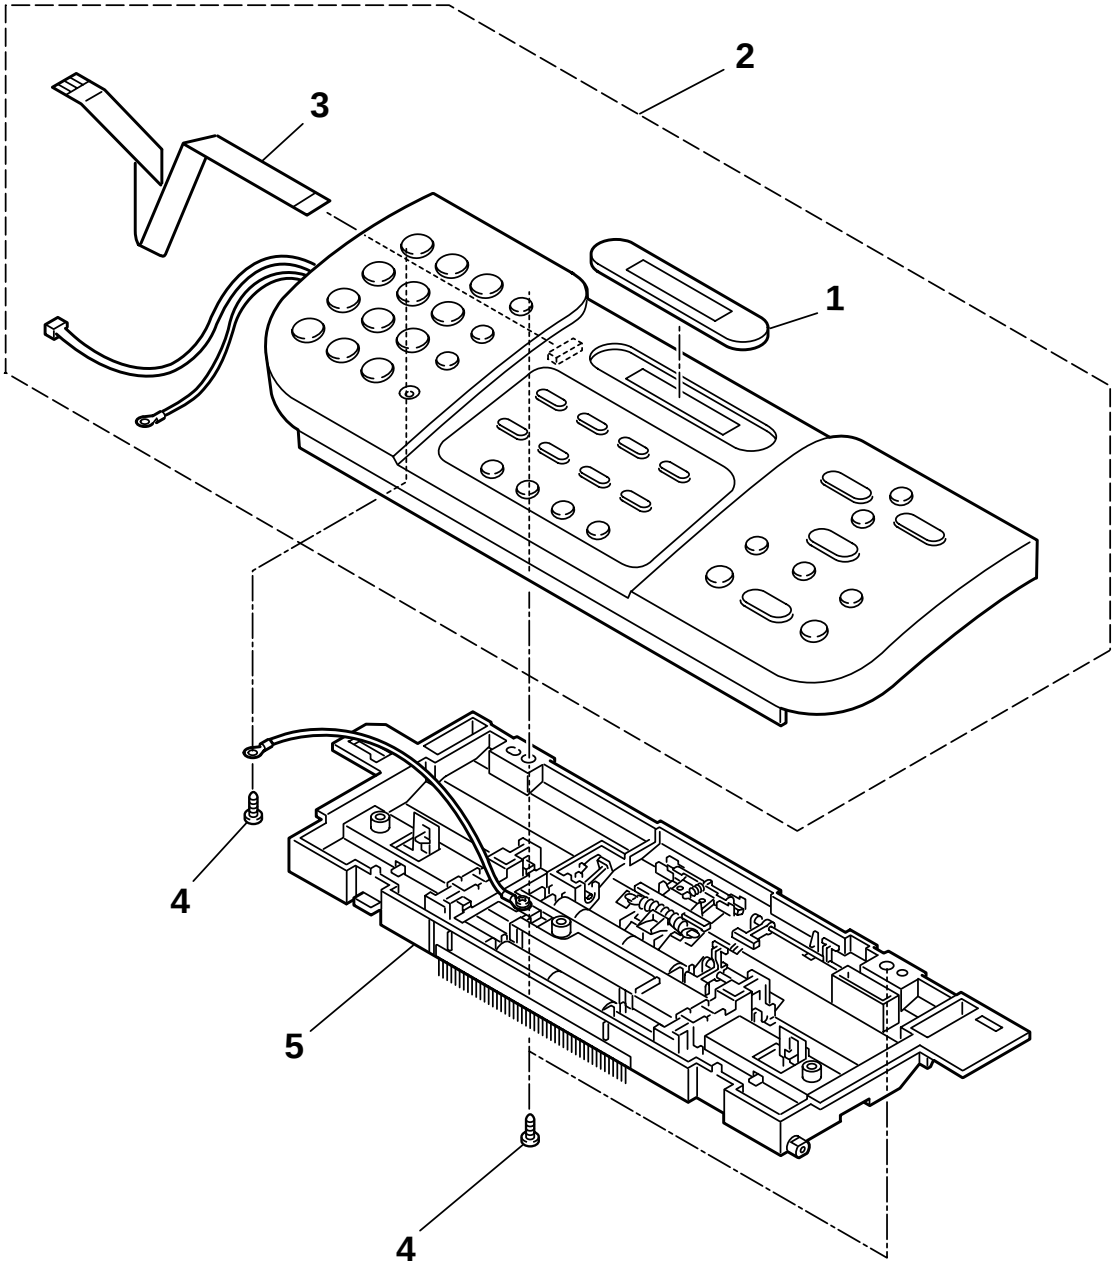

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
7 - 1	HB1-4920-000		1	PANEL, DISPLAY	
2	HG5-2610-000		1	OPERATION PANEL UNIT	FAX-EB15
	HG5-2618-000		1	OPERATION PANEL UNIT	FAX-EB10
3	HH2-2989-000		1	CABLE, FLAT,13P	
4	XB4-7300-809		3	SCREW, TAP, BINDING HEAD, M3X8	
5	NPN		1	ADF UPPER	

FIGURE 8 ADF UPPER

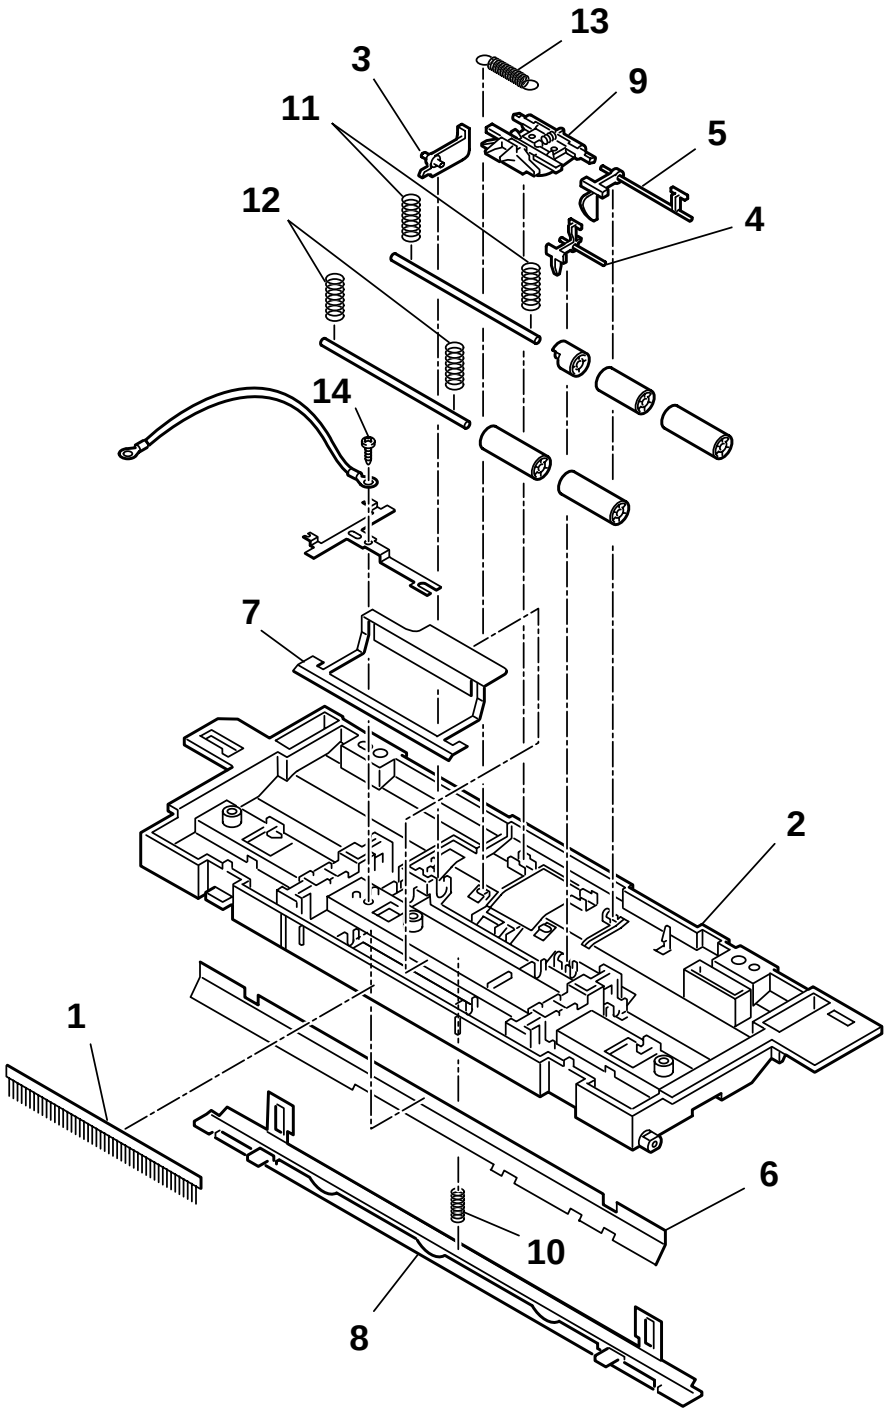

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
8 - 1	HB1-4072-000		1	BRUSH, STATIC DISCHARGE	
2	HB1-4898-000	N	1	FRAME, ADF, UPPER	
3	HB1-4903-000		1	STOPPER, DOCUMENT	
4	HB1-4906-000		1	ARM, DETECTION (DES)	
5	HB1-4907-000		1	ARM, DETECTION (DS)	
6	HB1-4964-000		1	SHEET, LIGHT SHIELD	
7	HB1-4965-000		1	SHEET	
8	HF5-0626-000		1	WHITE REFERENCE SHEET UNIT	
9	HG5-2609-000		1	SEPARATION GUIDE ASS'Y	
10	HS5-2170-000		1	SPRING, WHITE SHEET	
11	HS5-2234-000		2	SPRING	
12	HS5-2235-000		2	SPRING	
13	HS5-2239-000		1	SPRING, ADF	
14	XB4-7300-809		1	SCREW, TAP, BINDING HEAD, M3X8	

FIGURE 9 ADF LOWER (1)

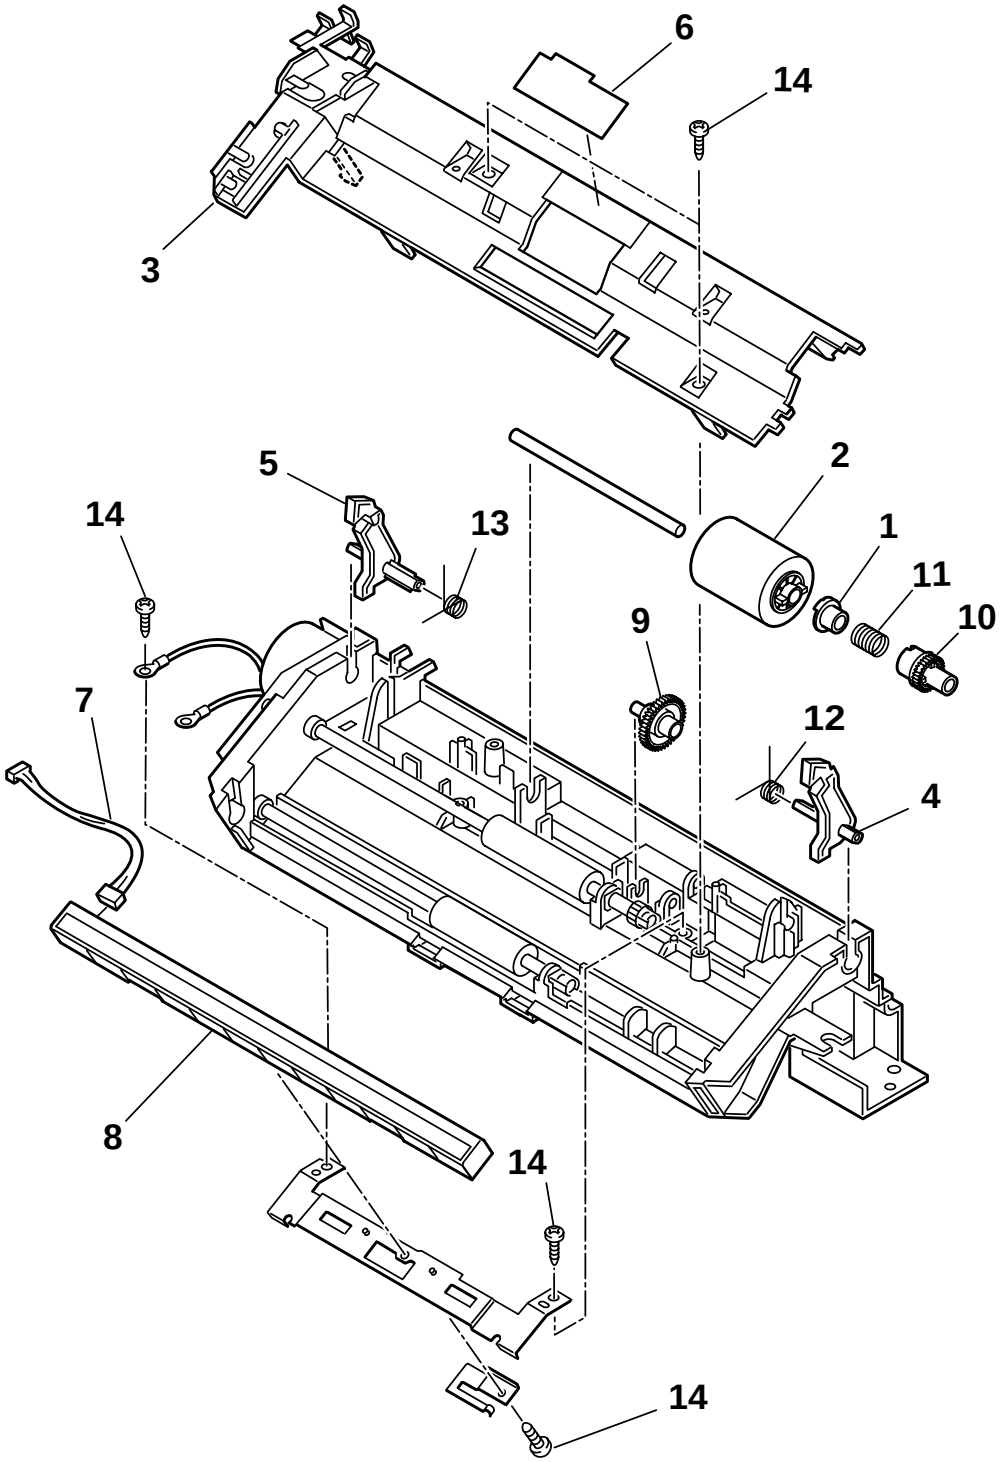

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
9 - 1	HB1-1779-000		1	SPACER	
2	HB1-4561-000		1	ROLLER, SEPARATION	
3	HB1-4928-000		1	COVER, ADF, LOWER	
4	HB1-4929-000		1	ARM, LOCK, RIGHT	
5	HB1-4930-000		1	ARM, LOCK, LEFT	
6	HB1-4969-000		1	SHEET, SEPARATION	
7	HH2-3062-000		1	CABLE WITH CONNECTOR, 7P	
8	HH7-2520-000		1	CONTACT SENSOR UNIT	
9	HS5-0335-000		1	GEAR, 31T/42T	
10	HS5-0342-000		1	GEAR, 32T	
11	HS5-2077-000		1	SPRING, CLUTCH	
12	HS5-2236-000		1	SPRING, TORSION	
13	HS5-2237-000		1	SPRING, TORSION	
14	XB4-7300-809		5	SCREW, TAP, BINDING HEAD, M3X8	

FIGURE 10 ADF LOWER (2)

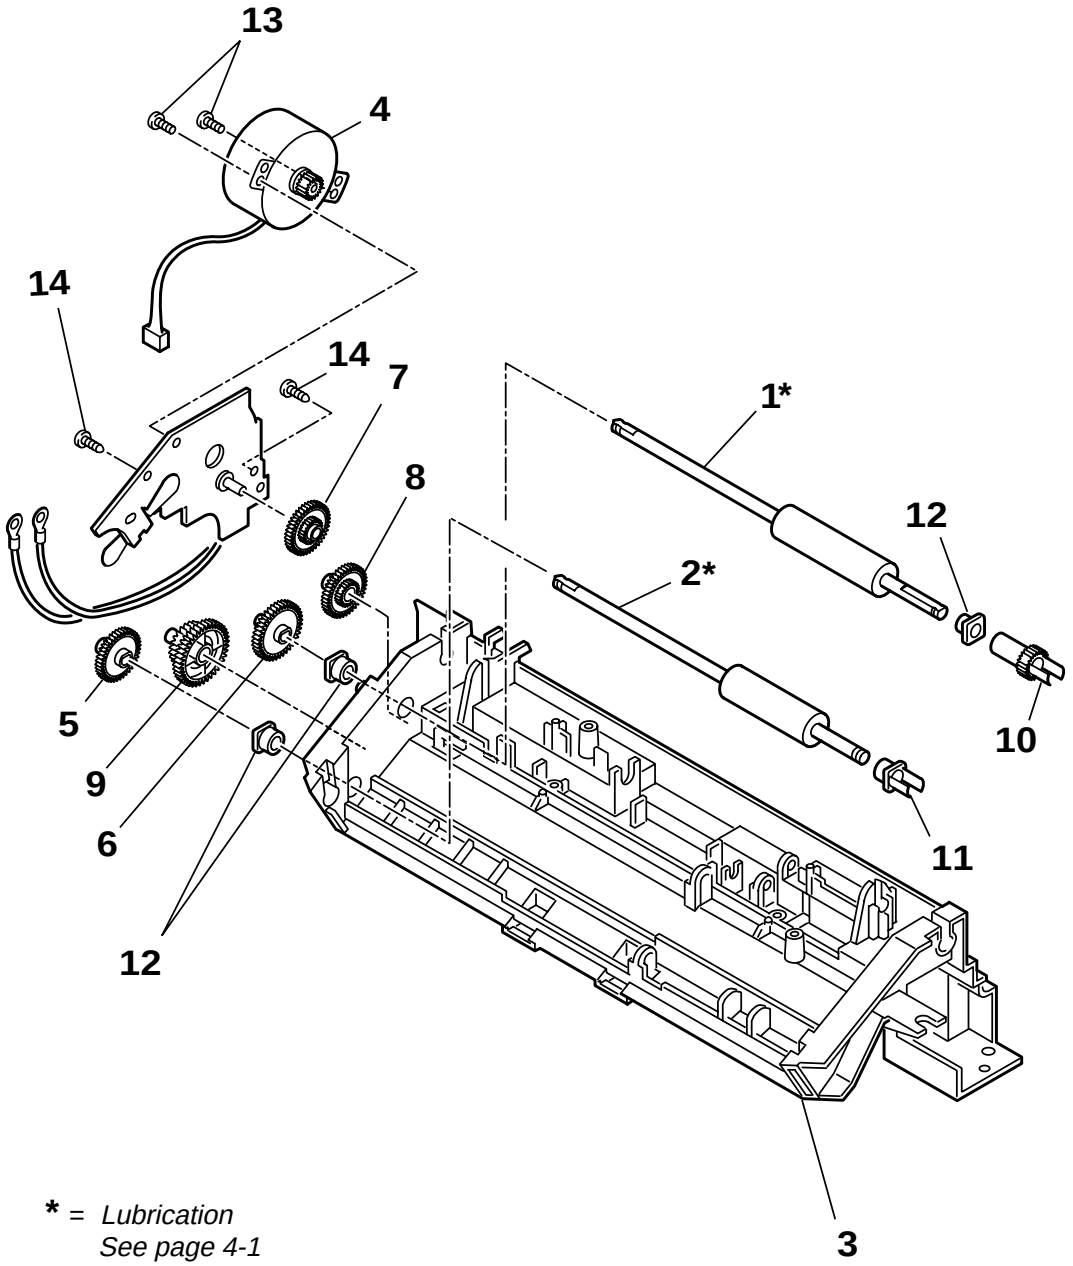

***** = *Lubrication*
See page 4-1

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
10 - 1	HB1-4926-000		1	ROLLER, DOCUMENT FEED	
2	HB1-4927-000		1	ROLLER, DOCUMENT EJECT	
3	HB1-4946-000	N	1	FRAME, ADF, LOWER	
4	HH7-2534-000		1	MOTOR, STEPPING, READER	
5	HS5-0333-000		1	GEAR, 36T	
6	HS5-0334-000		1	GEAR, 45T	
7	HS5-0336-000		1	GEAR, 19T/40T	
8	HS5-0337-000		1	GEAR, 19T/42T	
9	HS5-0340-000		1	GEAR, 39T/49T	
10	HS5-0341-000		1	GEAR, 19T	
11	HS5-1092-000		1	BUSHING	
12	HS5-1093-000		3	BUSHING	
13	XB1-2300-407		2	SCREW, BH3X4 (S)	
14	XB4-7300-809		2	SCREW, TAP, BINDING HEAD, M3X8	

FIGURE 11 AUTO SHEET FEEDER & PCNT BOARD

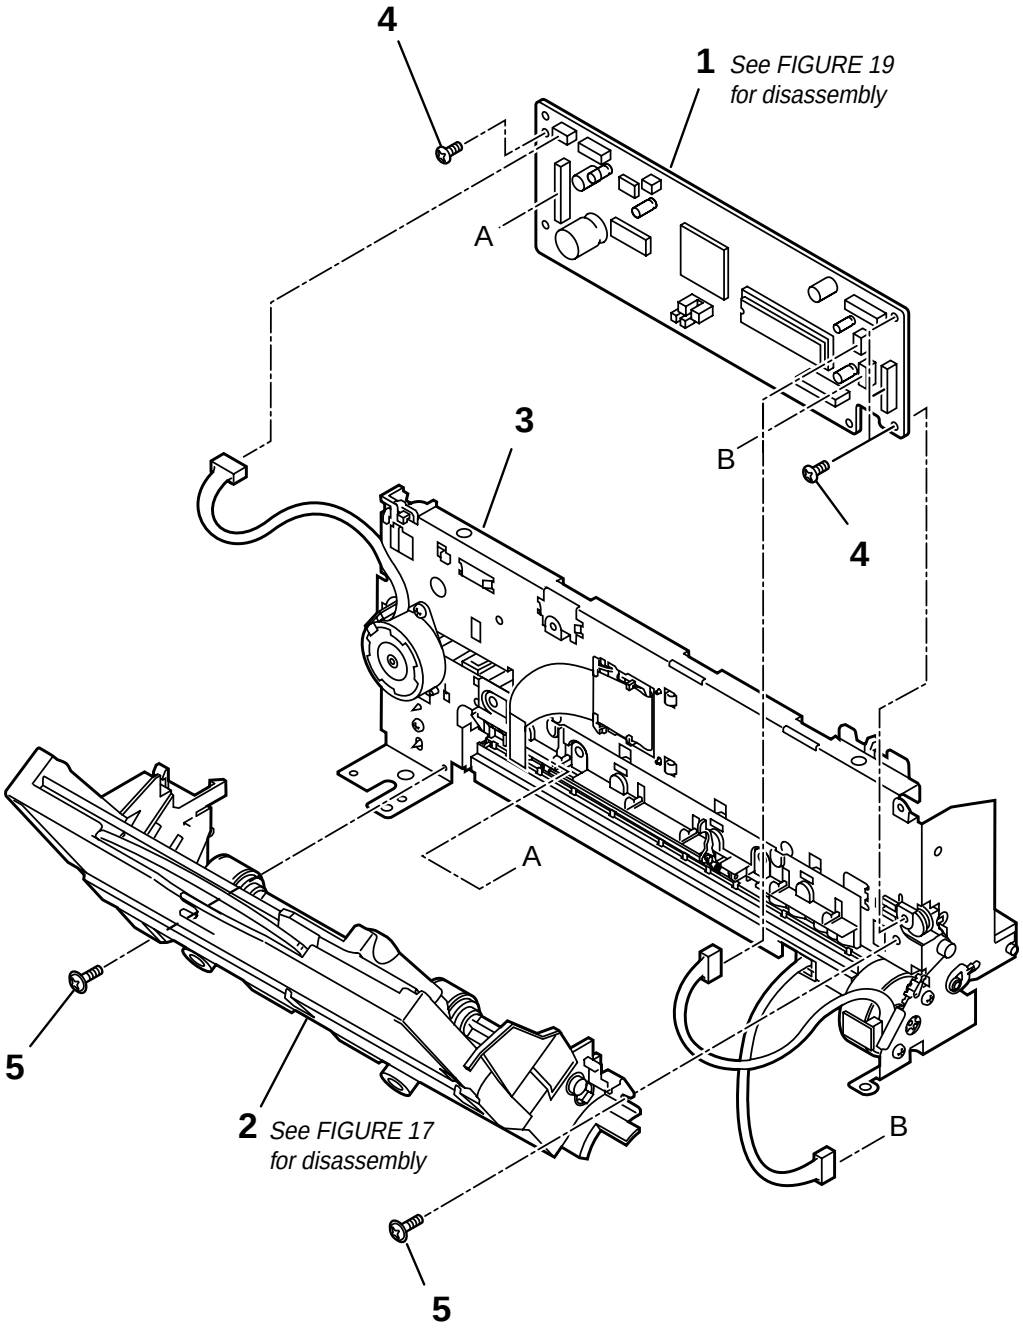

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
11 - 1	HG5-2605-000		1	PCNT BOARD ASS'Y	
2	NPN		1	AUTO SHEET FEEDER	
3	HG5-2615-000		1	PRINT ASS'Y	
4	XB1-2300-407		3	SCREW, BH3X4 (S)	
5	XB6-7300-607		2	SCREW, TP, M3X6	

FIGURE 12 CARRIAGE SECTION

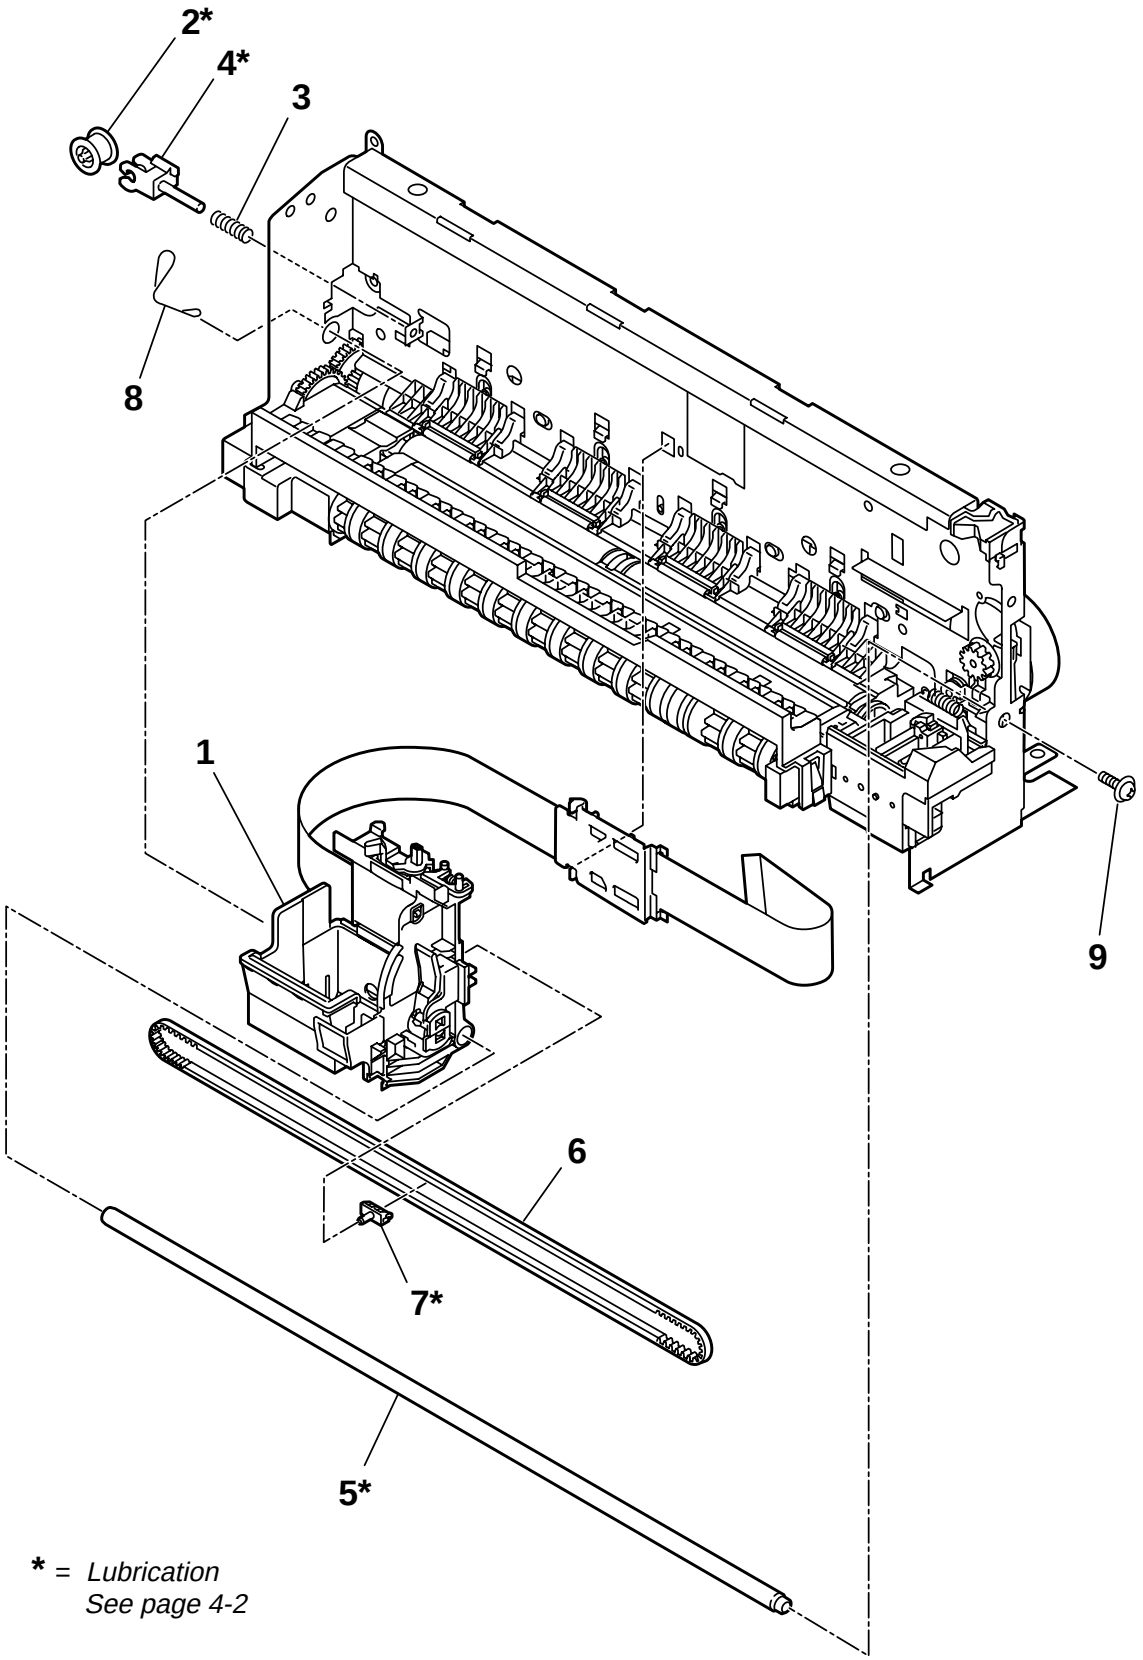

* = Lubrication
See page 4-2

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
12 - 1	HG5-2626-000		1	CARRIAGE UNIT	
2	QB1-0501-020		1	ROLLER, IDLER	
3	QB1-0503-000		1	SPRING, COIL	
4	QB1-3834-000		1	BRACKET, IDLER	
5	QB1-3837-000	N	1	SHAFT, CARRIAGE	
6	QB1-3865-000		1	BELT, CARRIAGE	
7	QB1-3866-000		1	HOLDER, BELT	
8	QB1-3897-000		1	CLIP, SHAFT	
9	XB5-6300-605		1	SCREW, TP, PH3X6	

FIGURE 13 MOTORS

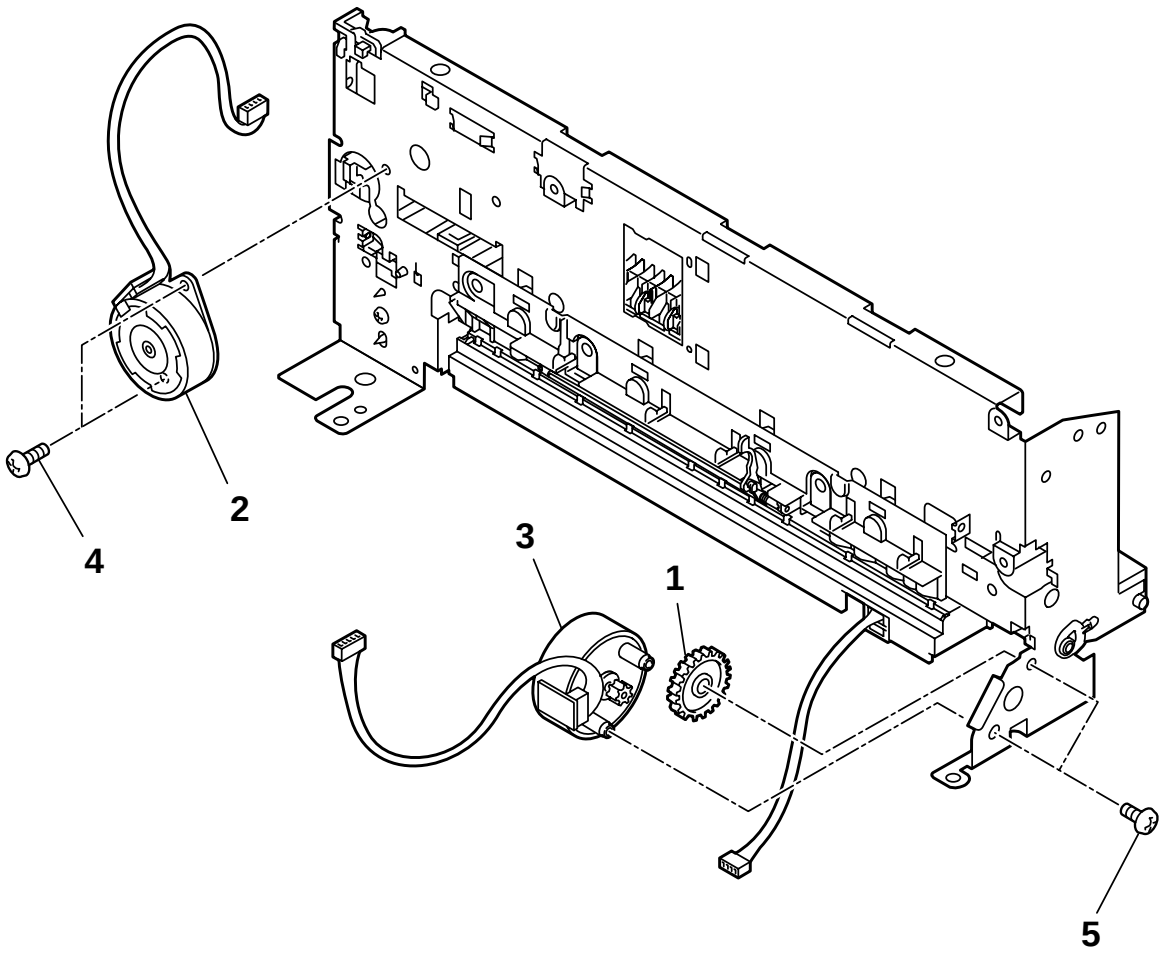

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
13 - 1	QB1-0500-000		1	GEAR, SLOW DOWN	
2	QH4-4241-000		1	MOTOR, CARRIAGE	
3	QH4-4245-000		1	MOTOR, PAPER FEED	
4	XA9-1116-000		2	SCREW, M3X5	
5	XB1-2300-405		2	SCREW, MACH. BH, M3X4	

FIGURE 14 PAPER FEED SECTION

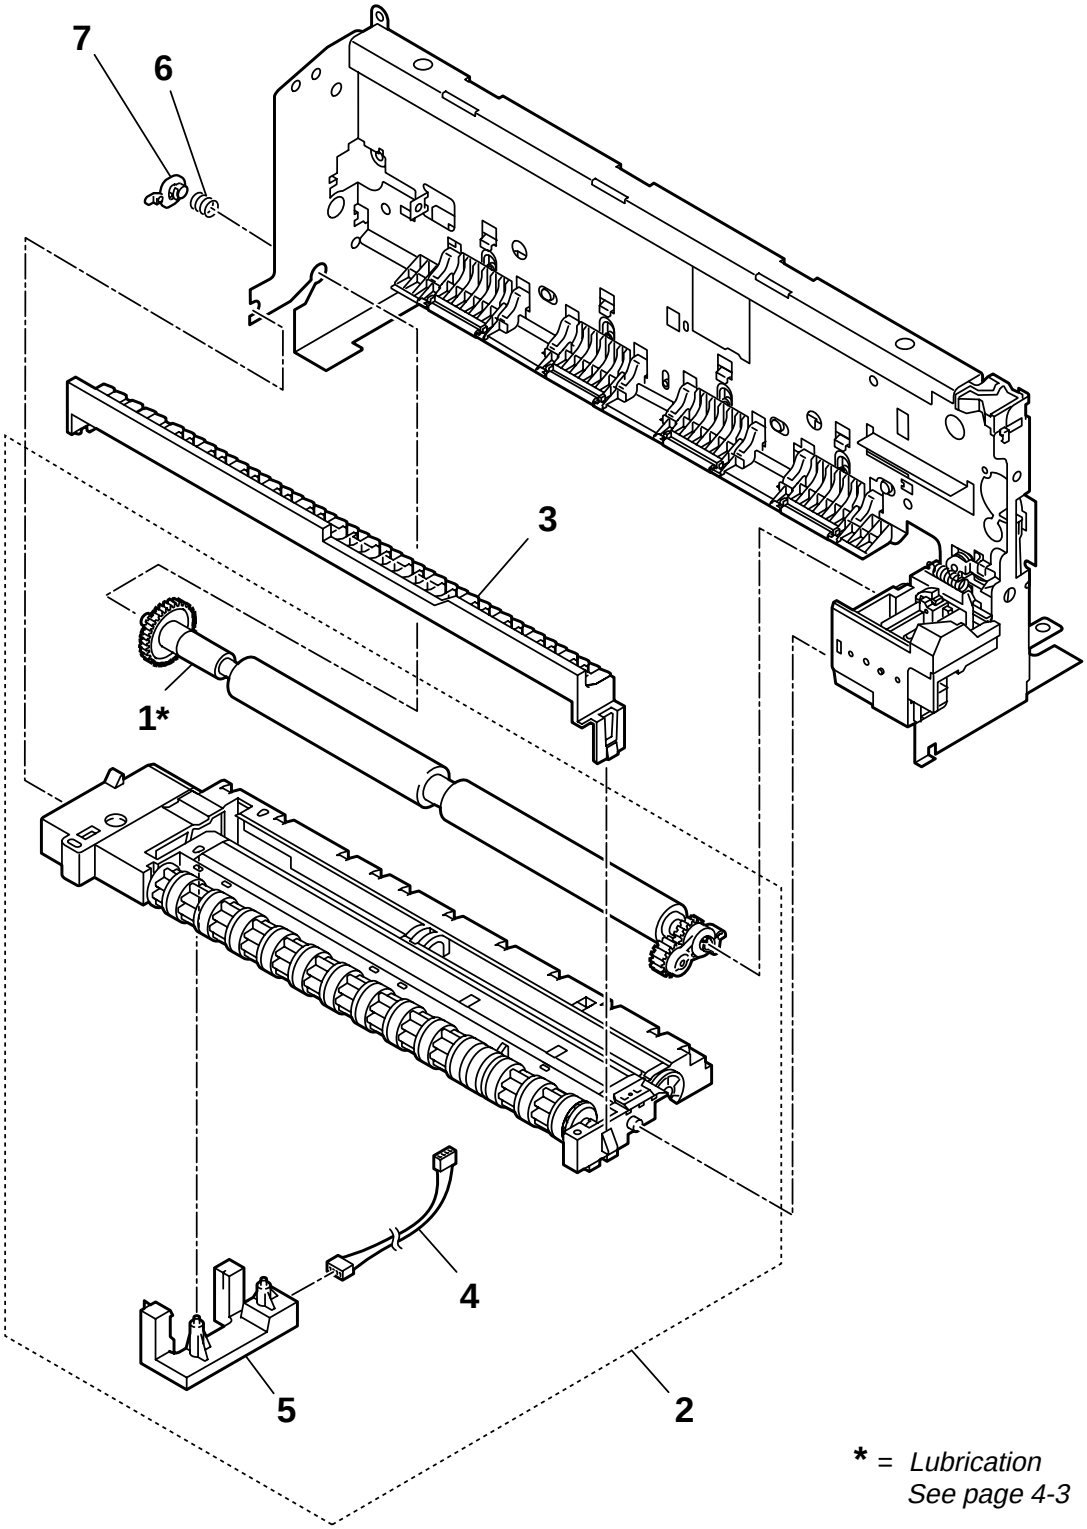

* = Lubrication
See page 4-3

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
14 - 1	HG5-2032-000		1	PAPER FEED ROLLER ASS'Y	
2	HG5-2623-000		1	PAPER FEED ASS'Y	
3	HG5-2630-000		1	SPUR ASS'Y	
4	HH2-2729-020		1	CABLE WITH CONNECTOR, 4P	
5	HH7-2371-000		1	INK DETECTION UNIT	
6	QB1-0423-000		1	SPRING, COIL	
7	QB1-3835-000		1	BUSHING	

FIGURE 15 PURGE UNIT

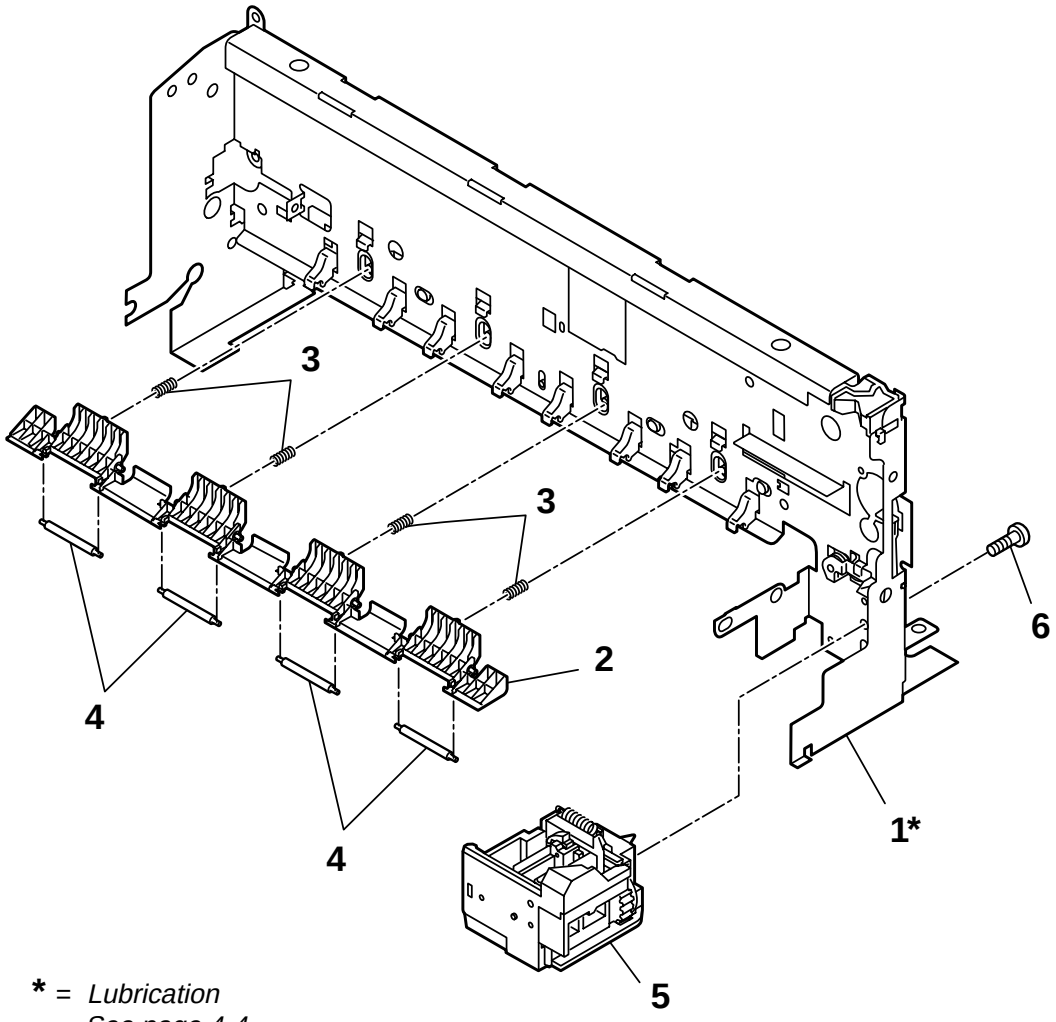

***** = *Lubrication*
See page 4-4

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
15 - 1	HG5-2616-000		1	PRINTER FRAME ASS'Y	
2	QB1-4879-000		1	PLATE, PRESSURE	
3	QB1-3832-000		4	SPRING, COIL	
4	QB1-3833-000		4	ROLLER, PRESSURE	
5	QG5-1319-020		1	PURGE UNIT	
6	XB4-7300-509		1	SCREW, TAPPING, M3X5	

FIGURE 16 PRINT FRAME

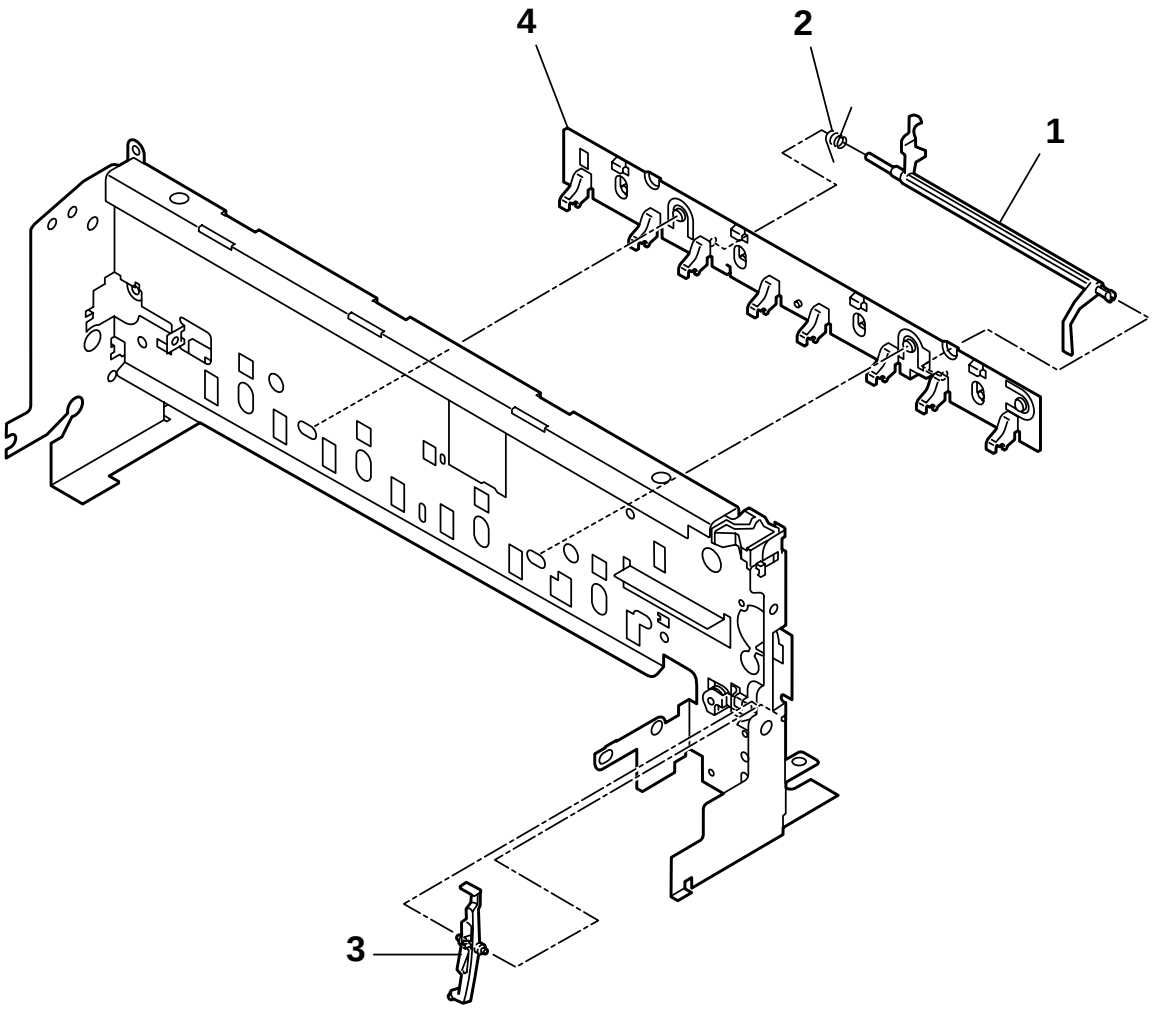

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
16 - 1	HB1-4086-000		1	ARM, PAPER SENSOR	
2	QB1-0412-000		1	SPRING, TORSION	
3	QB1-3905-000		1	ARM, SENSOR	
4	NPN		1	GUIDE, PRESSURE PLATE	

FIGURE 17 AUTO SHEET FEEDER

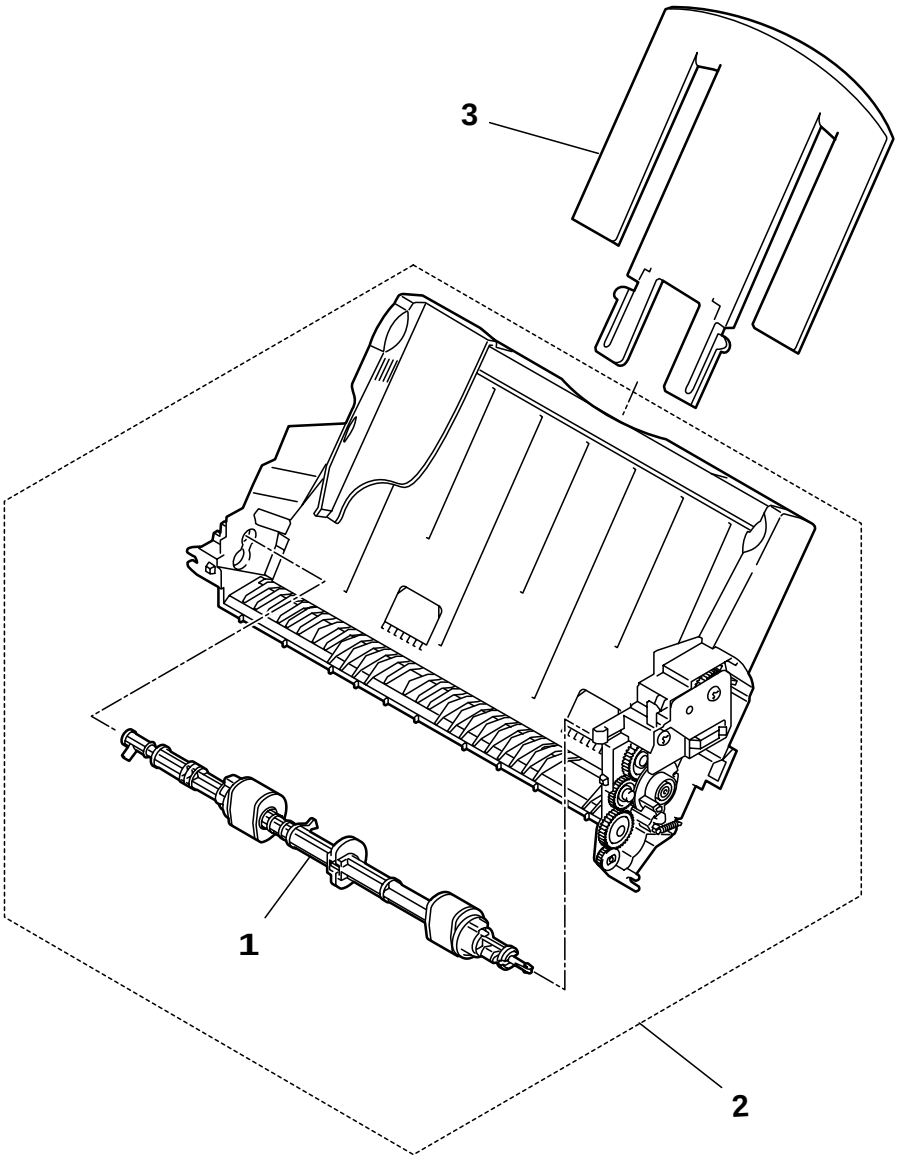

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
17 - 1	HG5-2026-000		1	PICK-UP ROLLER ASS'Y	
2	HG5-2611-000		1	AUTO SHEET FEEDER ASS'Y	
3	HB1-4923-000		1	TRAY, EXTENSION	

FIGURE 18 SCNT BOARD

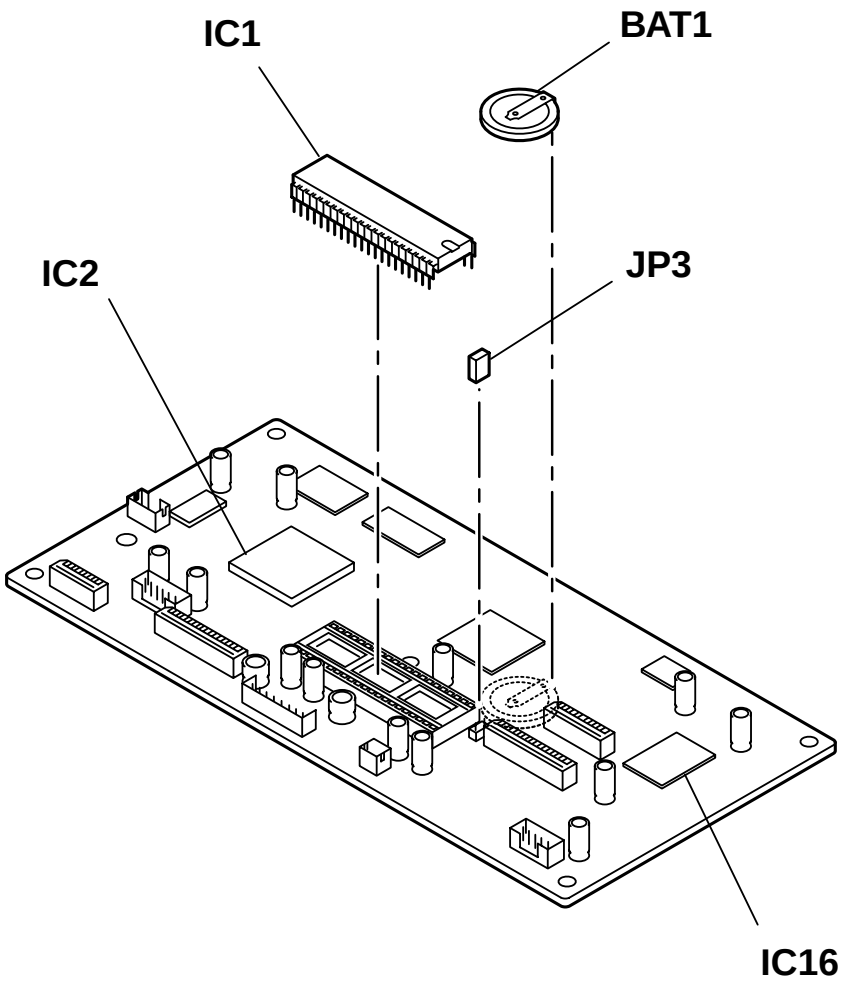

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
18 - BAT1	WK1-5130-000		1	BATTERY, LITHIUM, CR2032/1HS	
IC1	HH4-3478-000		1	IC, MR27V1652DRA, OTP-ROM	
IC2	HH4-3475-000		1	IC, MB87L1930, GATE-ARRAY	
IC16	HH4-3476-000		1	IC, CX06829-11, MODEM	FAX-EB10
	HH4-3477-000		1	IC, CX06831-12, MODEM	FAX-EB15
JP3	WS1-5792-000		1	PLUG, SHORT	

FIGURE 19 PCNT BOARD

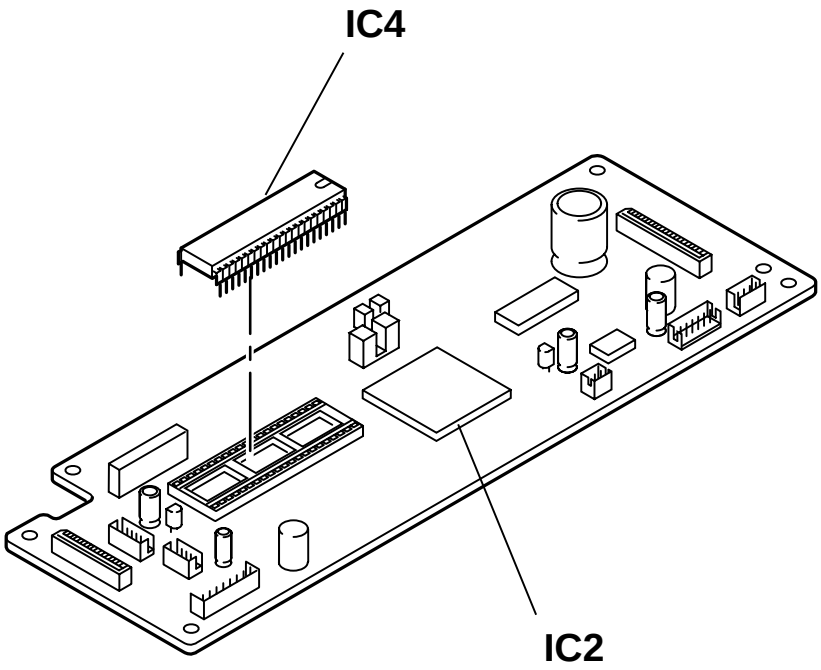

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
19 - IC2	QH8-0158-000		1	IC,T6W91,ASIC,	
IC4	HH4-3479-000		1	IC, MSM27C402CZ, OTP-ROM	

FIGURE 20 NCU BOARD

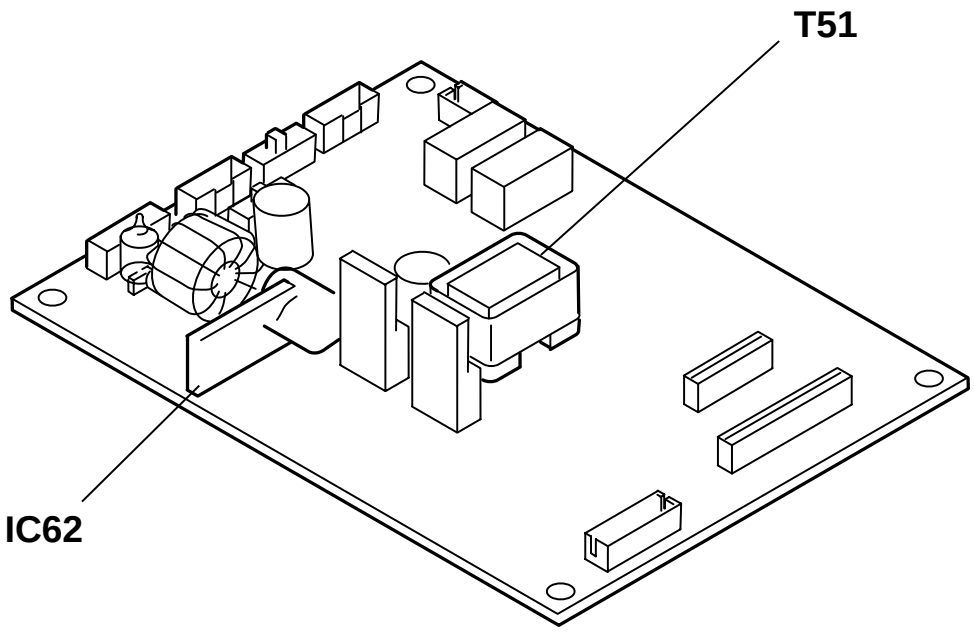

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
20 - IC62	HH7-2528-000		1	IC, THS-65, HYBRID	
T51	HH7-2427-000		1	TRANSFORMER, AUDIO	

FIGURE 21 MODULAR JACK BOARD

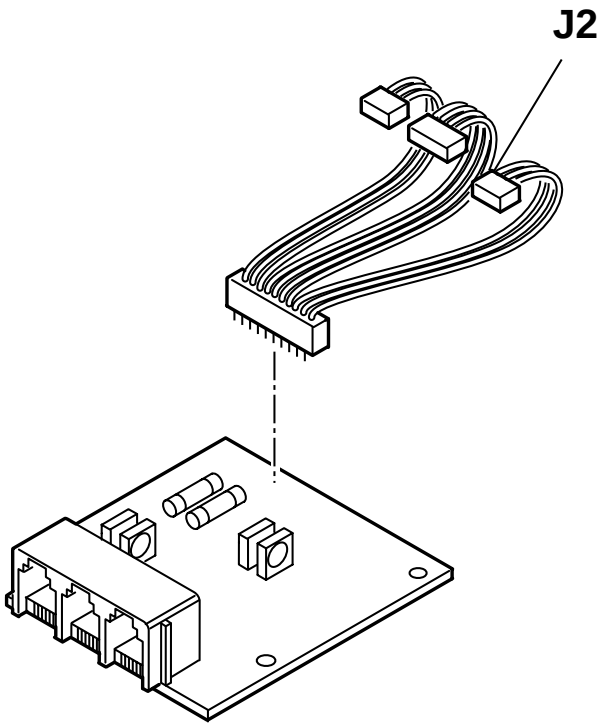

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
21 - J2	HH2-3067-000		1	CABLE WITH CONNECTOR, 15P	

FIGURE 22 TELEPHONE 7

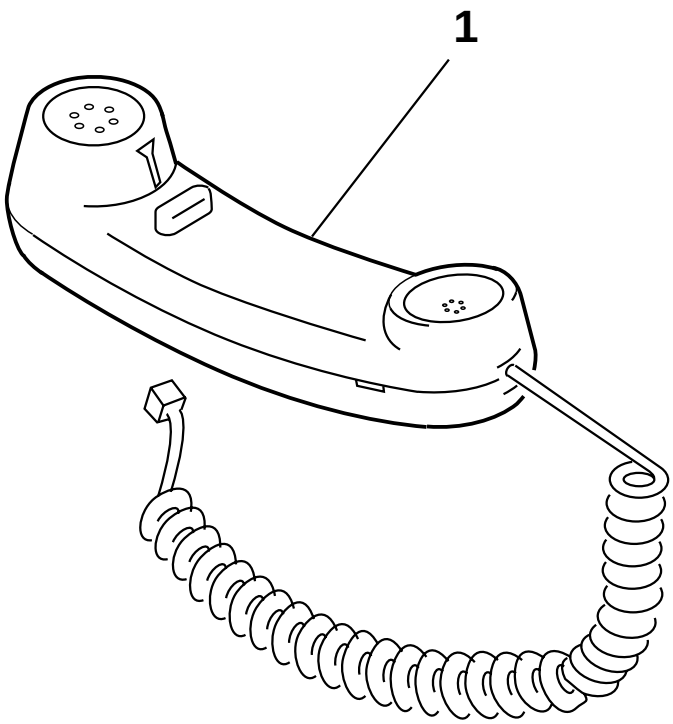

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
22 - 1	HH7-2532-000		1	HANDSET UNIT	UK
	HH7-2594-000		1	HANDSET UNIT	HUN POL
	HH7-2595-000		1	HANDSET UNIT	CZO LAT
	HH7-2596-000		1	HANDSET UNIT	SLO
	HH7-2597-000		1	HANDSET UNIT	S.A.

3. TOOL

FIGURE 23 TOOLS

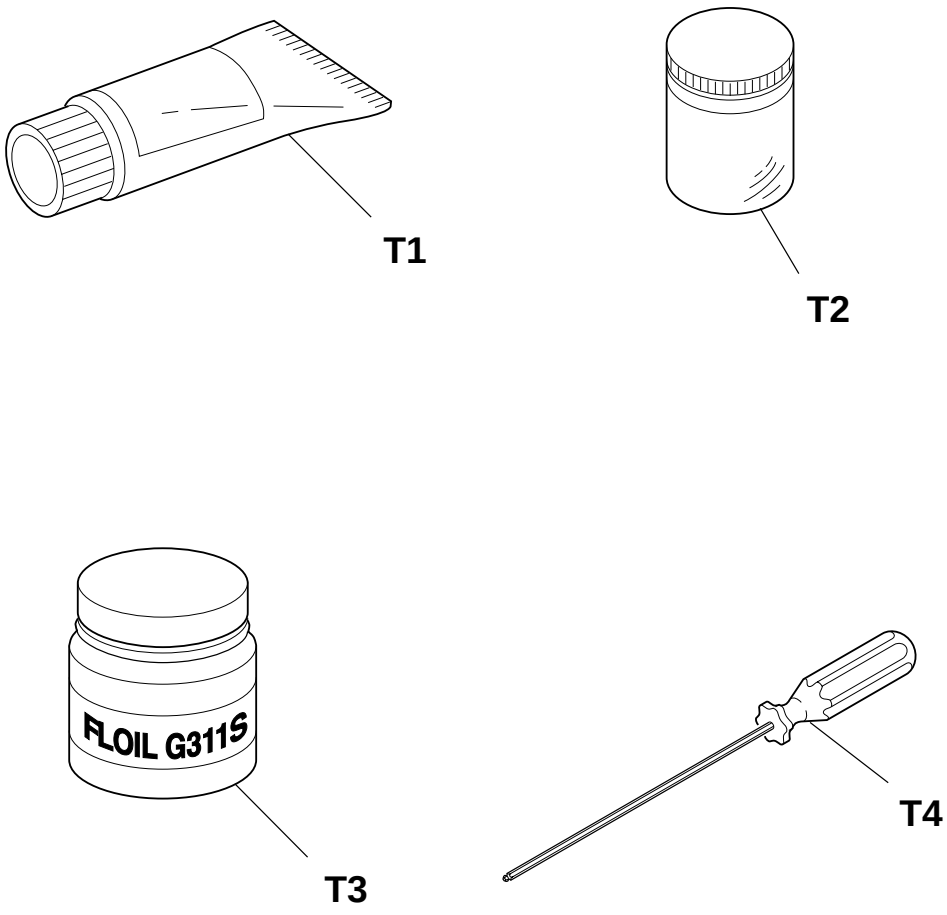

FIGURE & KEY No.	PART No.	RANK	QTY	DESCRIPTION	REMARKS
23 - T1	CK-0562-000		1	LUBE, MOLYKOTE PG-641 GREASE	
T2	CK-8006-000		1	ELECTRICITY GREASE (IF-20)	
T3	TKC-0953-000		1	GREASE, FLOIL G311S (20GS)	
T4	HY9-0021-000		1	SCREWDRIVER, HEX HEAD (1.27MM)	

4. LUBRICATIONS

4.1 Locations

Some parts are lubricated with grease to ensure smooth operation and to increase conductivity. If lubricated parts are replaced or grease is removed, grease must be reapplied.

4.1.1 ADF LOWER

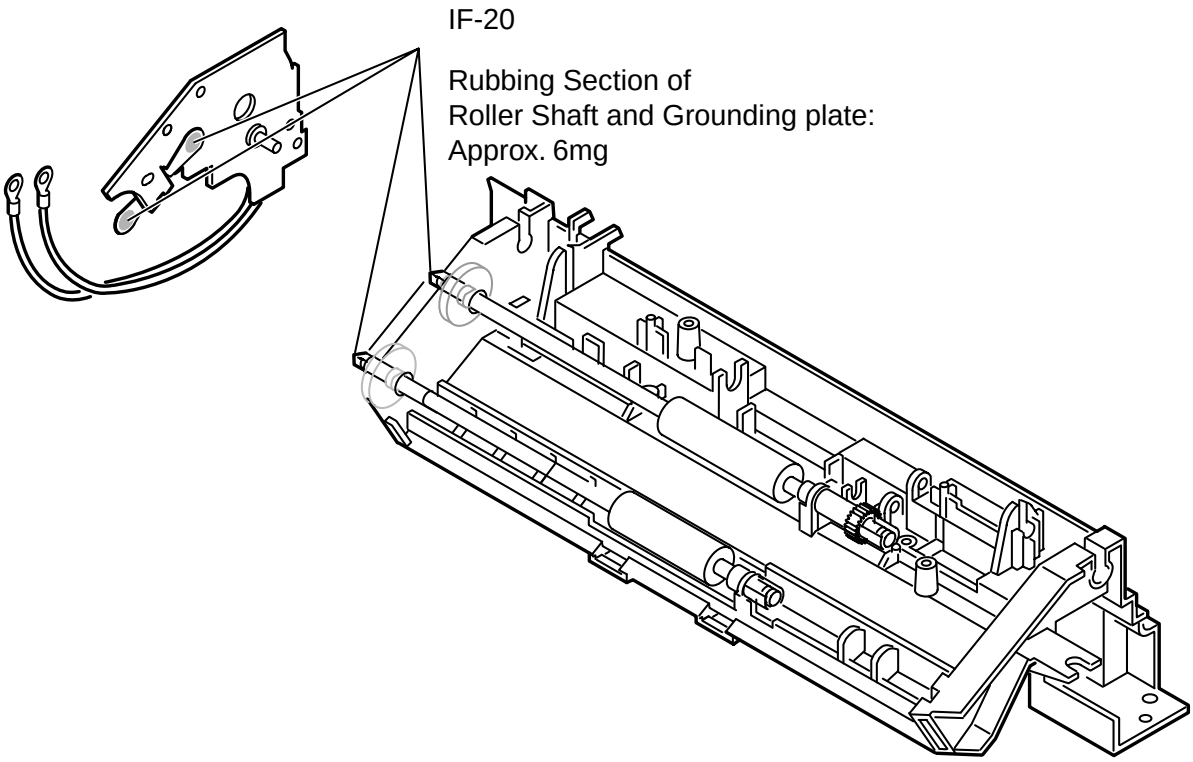

See FIGURE 10 for disassembly

4.1.2 PRINT ASS'Y

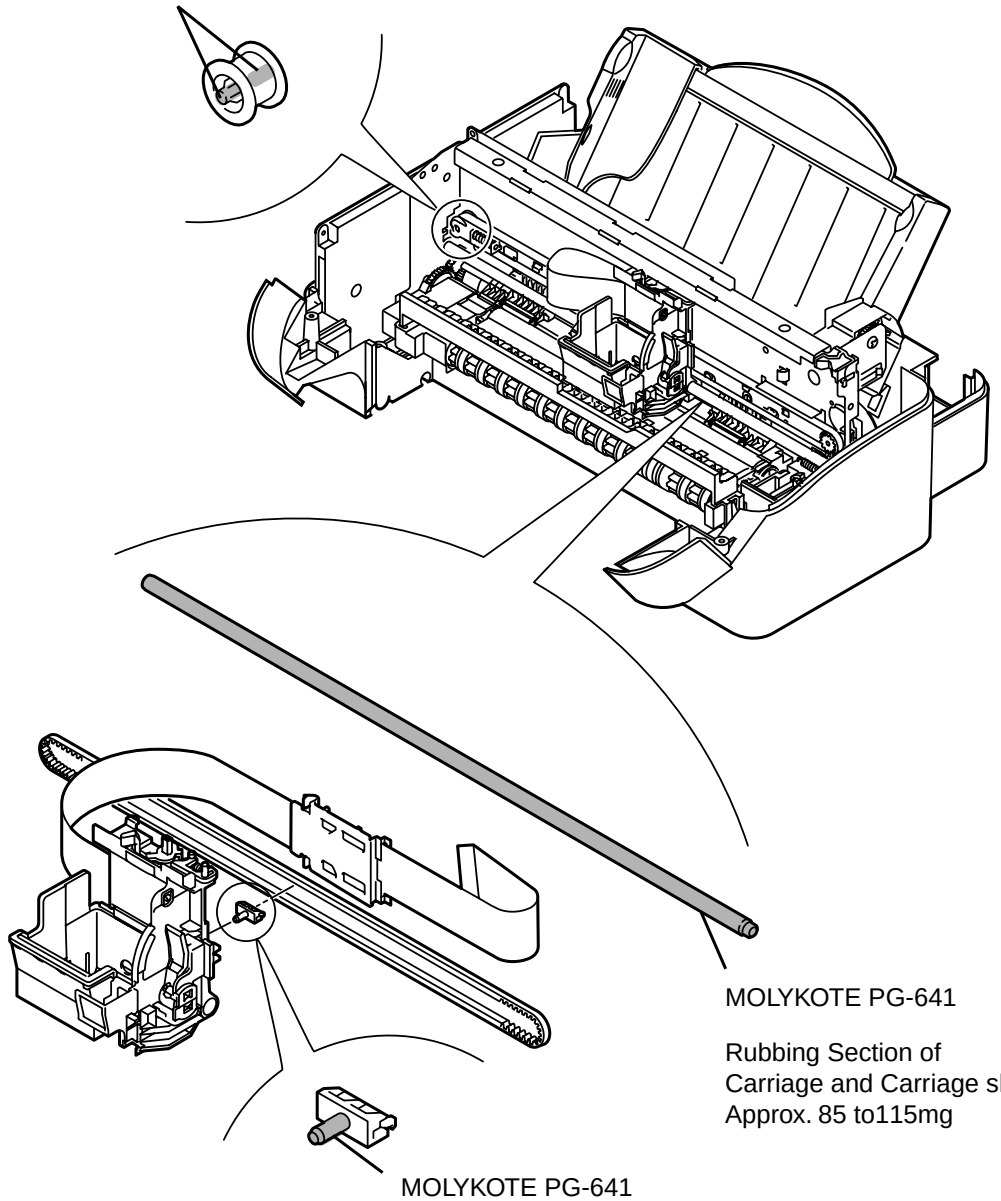

See FIGURE 12 for disassembly

4.1.3 PAPER FEED ASS'Y

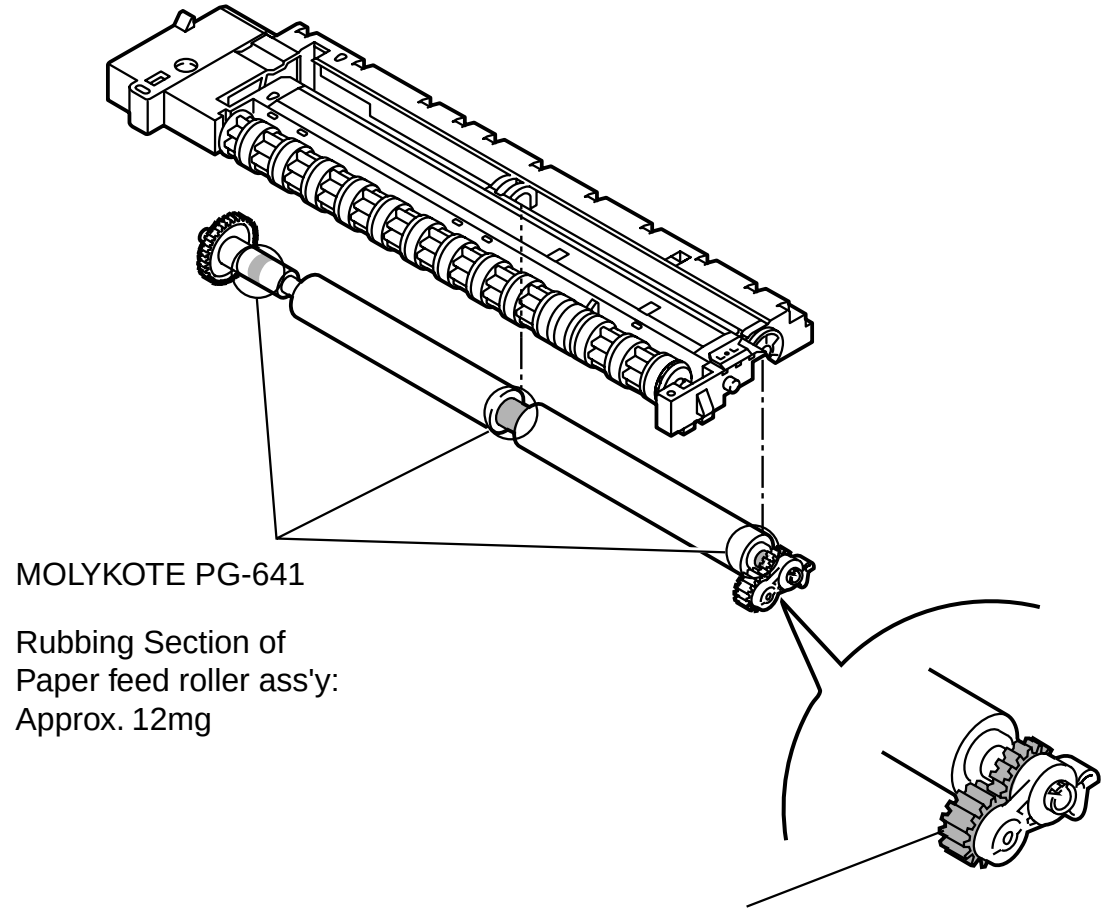

See FIGURE 14 for disassembly

4.1.4 CARRIAGE HOOK

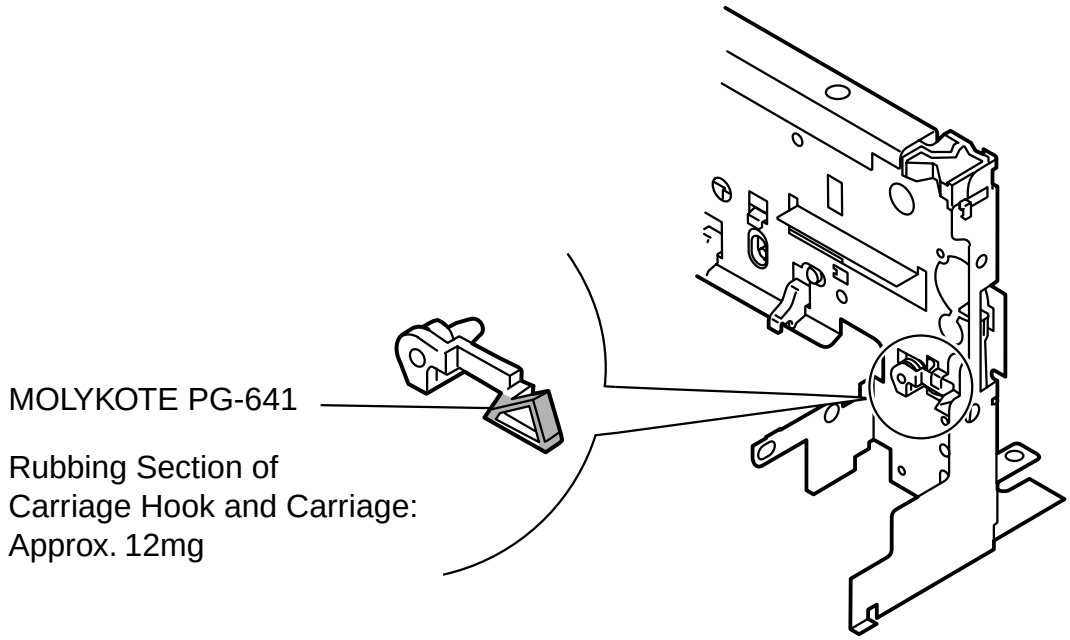

See FIGURE 15 for disassembly

5. NUMERICAL INDEX

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
CK-0562-000	23 - T1	LUBE, MOLYKOTE PG-641 GREASE
CK-8006-000	23 - T2	ELECTRICITY GREASE (IF-20)
HB1-1779-000	9 - 1	SPACER
HB1-2867-000	4 - 1	STOPPER, OPERATION PANEL
HB1-4072-000	8 - 1	BRUSH, STATIC DISCHARGE
HB1-4086-000	16 - 1	ARM, PAPER SENSOR
HB1-4561-000	9 - 2	ROLLER, SEPARATION
HB1-4873-000	3 - 1	COVER, PRINTER
HB1-4874-000	3 - 2	GUIDE, DOCUMENT, RIGHT
HB1-4875-000	3 - 3	GUIDE, DOCUMENT, LEFT
HB1-4877-000	2 - 1	TRAY, PAPER EXIT
HB1-4878-000	2 - 2	TRAY, PAPER EXTENSION
HB1-4881-000	2 - 3	TRAY, DOCUMENT EXIT
HB1-4882-000	3 - 4	COVER, REAR
HB1-4884-000	6 - 1	COVER, MODULAR BOARD
HB1-4885-000	6 - 2	COVER, POWER SUPPLY
HB1-4886-000	5 - 1	ABSORBER, WASTE INK
HB1-4887-000	5 - 2	ABSORBER, WASTE INK
HB1-4888-000	5 - 3	ABSORBER, WASTE INK
HB1-4891-000	3 - 5	COVER, UPPER
HB1-4892-000	3 - 6	HOLDER, HANDSET REST
HB1-4894-000	2 - 4	TRAY, DOCUMENT
HB1-4897-000	3 - 7	LABEL, CARTRIDGE SET
HB1-4898-000	8 - 2	FRAME, ADF, UPPER
HB1-4903-000	8 - 3	STOPPER, DOCUMENT
HB1-4906-000	8 - 4	ARM, DETECTION (DES)
HB1-4907-000	8 - 5	ARM, DETECTION (DS)
HB1-4920-000	7 - 1	PANEL, DISPLAY
HB1-4923-000	17 - 3	TRAY, EXTENSION
HB1-4926-000	10 - 1	ROLLER, DOCUMENT FEED
HB1-4927-000	10 - 2	ROLLER, DOCUMENT EJECT
HB1-4928-000	9 - 3	COVER, ADF, LOWER
HB1-4929-000	9 - 4	ARM, LOCK, RIGHT
HB1-4930-000	9 - 5	ARM, LOCK, LEFT
HB1-4946-000	10 - 3	FRAME, ADF, LOWER
HB1-4953-000	3 - 8	RACK
HB1-4954-000	2 - 4	TRAY, DOCUMENT
HB1-4964-000	8 - 6	SHEET, LIGHT SHIELD
HB1-4965-000	8 - 7	SHEET
HB1-4966-000	5 - 4	ABSORBER, WASTE INK
HB1-4969-000	9 - 6	SHEET, SEPARATION
HF5-0625-000	6 - 3	MAIN FRAME ASS'Y
HF5-0626-000	8 - 8	WHITE REFERENCE SHEET UNIT
HG5-2026-000	17 - 1	PICK-UP ROLLER ASS'Y
HG5-2032-000	14 - 1	PAPER FEED ROLLER ASS'Y
HG5-2587-000	6 - 4	NCU BOARD ASS'Y
HG5-2603-000	6 - 5	MODULAR JACK BOARD ASS'Y
HG5-2604-000	6 - 6	SCNT BOARD ASS'Y
HG5-2605-000	11 - 1	PCNT BOARD ASS'Y
HG5-2609-000	8 - 9	SEPARATION GUIDE ASS'Y
HG5-2610-000	7 - 2	OPERATION PANEL UNIT
HG5-2611-000	17 - 2	AUTO SHEET FEEDER ASS'Y
HG5-2615-000	11 - 3	PRINT ASS'Y

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
HG5-2616-000	15 - 1	PRINTER FRAME ASS'Y
HG5-2618-000	7 - 2	OPERATION PANEL UNIT
HG5-2622-000	6 - 6	SCNT BOARD ASS'Y
HG5-2623-000	14 - 2	PAPER FEED ASS'Y
HG5-2626-000	12 - 1	CARRIAGE UNIT
HG5-2630-000	14 - 3	SPUR ASS'Y
HH2-2729-020	14 - 4	CABLE WITH CONNECTOR, 4P
HH2-2989-000	7 - 3	CABLE, FLAT,13P
HH2-3062-000	9 - 7	CABLE WITH CONNECTOR, 7P
HH2-3063-000	5 - 5	CABLE WITH CONNECTOR, 8P
HH2-3064-000	5 - 6	CABLE, FLAT, 25P
HH2-3065-000	6 - 9	CABLE WITH CONNECTOR, 6P
HH2-3067-000	21 - J2	CABLE WITH CONNECTOR, 15P
HH2-3116-000	6 - 7	CABLE, FLAT, 23P
HH2-3118-000	6 - 8	CABLE, FLAT, 14P
HH3-5367-000	6 - 10	POWER SUPPLY UNIT
HH4-3475-000	18 - IC2	IC, MB87L1930, GATE-ARRAY
HH4-3476-000	18 - IC16	IC, CX06829-11, MODEM
HH4-3477-000	18 - IC16	IC, CX06831-12, MODEM
HH4-3478-000	18 - IC1	IC, MR27V1652DRA, OTP-ROM
HH4-3479-000	19 - IC4	IC, MSM27C402CZ, OTP-ROM
HH7-2371-000	14 - 5	INK DETECTION UNIT
HH7-2373-000	5 - 7	SPEAKER UNIT
HH7-2427-000	20 - T51	TRANSFORMER, AUDIO
HH7-2520-000	9 - 8	CONTACT SENSOR UNIT
HH7-2528-000	20 - IC62	IC, THS-65, HYBRID
HH7-2530-000	1 - 1	HANDSET UNIT
HH7-2532-000	22 - 1	HANDSET UNIT
HH7-2534-000	10 - 4	MOTOR, STEPPING, READER
HH7-2594-000	22 - 1	HANDSET UNIT
HH7-2595-000	22 - 1	HANDSET UNIT
HH7-2596-000	22 - 1	HANDSET UNIT
HH7-2597-000	22 - 1	HANDSET UNIT
HS5-0172-000	3 - 9	PINION, 18T
HS5-0333-000	10 - 5	GEAR, 36T
HS5-0334-000	10 - 6	GEAR, 45T
HS5-0335-000	9 - 9	GEAR, 31T/42T
HS5-0336-000	10 - 7	GEAR, 19T/40T
HS5-0337-000	10 - 8	GEAR, 19T/42T
HS5-0340-000	10 - 9	GEAR, 39T/49T
HS5-0341-000	10 - 10	GEAR, 19T
HS5-0342-000	9 - 10	GEAR, 32T
HS5-1092-000	10 - 11	BUSHING
HS5-1093-000	10 - 12	BUSHING
HS5-2077-000	9 - 11	SPRING, CLUTCH
HS5-2094-000	3 - 10	SPRING
HS5-2170-000	8 - 10	SPRING, WHITE SHEET
HS5-2234-000	8 - 11	SPRING
HS5-2235-000	8 - 12	SPRING
HS5-2236-000	9 - 12	SPRING, TORSION
HS5-2237-000	9 - 13	SPRING, TORSION
HS5-2239-000	8 - 13	SPRING, ADF
HY9-0021-000	23 - T4	SCREWDRIVER, HEX HEAD (1.27MM)

PART NUMBER	FIGURE & KEY NO	DESCRIPTION
QB1-0412-000	16 - 2	SPRING, TORSION
QB1-0423-000	14 - 6	SPRING, COIL
QB1-0500-000	13 - 1	GEAR, SLOW DOWN
QB1-0501-020	12 - 2	ROLLER, IDLER
QB1-0503-000	12 - 3	SPRING, COIL
QB1-3593-000	6 - 11	FOOT, PRINTER
QB1-3832-000	15 - 3	SPRING, COIL
QB1-3833-000	15 - 4	ROLLER, PRESSURE
QB1-3834-000	12 - 4	BRACKET, IDLER
QB1-3835-000	14 - 7	BUSHING
QB1-3837-000	12 - 5	SHAFT, CARRIAGE
QB1-3865-000	12 - 6	BELT, CARRIAGE
QB1-3866-000	12 - 7	HOLDER, BELT
QB1-3897-000	12 - 8	CLIP, SHAFT
QB1-3905-000	16 - 3	ARM, SENSOR
QB1-4879-000	15 - 2	PLATE, PRESSURE
QG5-1319-020	15 - 5	PURGE UNIT
QH4-4241-000	13 - 2	MOTOR, CARRIAGE
QH4-4245-000	13 - 3	MOTOR, PAPER FEED
QH8-0158-000	19 - IC2	IC,T6W91,ASIC,
TKC-0953-000	23 - T3	GREASE, FLOIL G311S (20GS)
WK1-5130-000	18 - BAT1	BATTERY, LITHIUM, CR2032/1HS
WS1-5792-000	18 - JP3	PLUG, SHORT
XA9-0283-000	3 - 11	SCREW, TP, PH3X6
XA9-1116-000	13 - 4	SCREW, M3X5
XB1-2300-405	13 - 5	SCREW, MACH. BH, M3X4
XB1-2300-407	6 - 12	SCREW, BH3X4 (S)
	10 - 13	
	11 - 4	
XB2-7300-607	4 - 2	SCREW, M3X6
	5 - 8	
	6 - 13	
XB2-7400-607	5 - 9	SCREW, TOOTHED WASHER, M4X6
	6 - 14	
XB4-7300-509	15 - 6	SCREW, TAPPING, M3X5
XB4-7300-809	3 - 12	SCREW, TAP, BINDING HEAD, M3X8
	4 - 3	
	5 - 10	
	6 - 15	
	7 - 4	
	8 - 14	
	9 - 14	
	10 - 14	
XB5-6300-605	12 - 9	SCREW, TP, PH3X6
XB6-7300-607	11 - 5	SCREW, TP, M3X6

Canon

PRINTED IN JAPAN (IMPRIME AU JAPON) 0401GR CANON INC.